



2 BERTH ROVER (AdBlue) USER GUIDE

ROADSIDE ASSISTANCE

 1300 016 532 (international +61 361 691 702)

 roadside@cruisinmotorhomes.com.au

RESERVATIONS OFFICE

 1300 664 485 (international +61 3 6248 4789)

 reservations@cruisinmotorhomes.com.au



THANK YOU FOR CHOOSING CRUISIN' MOTORHOMES!

ABOUT US

Cruisin' Motorhomes is an expert travel business with a personal touch and years of experience.

We are a home-grown hire company offering a range of fully-equipped campervans and motorhomes – the ideal vehicles for self-driven adventures across Australia.

BE A SAFE DRIVER FOLLOW THE RULES

-  Don't Drive At Night
-  Make Frequent Stops
-  Drive On The Left Side Of The Road
-  Everyone Must Wear A Seatbelt
-  Pull Off The Road When Taking Photos Or Reading Maps
-  Slow Down On Dangerous Roads
-  Obey The Speed Limit
-  Slow Down And Watch For Wildlife
-  Never Use Your Phone While Driving

ALL BRANCH LOCATIONS

Hobart	3 Runway Pl, Cambridge TAS 7170
Melbourne	25-27 Catalina Dr, Tullamarine VIC 3043
Sydney	10 Wurrook Circuit, Caringbah NSW 2229
Brisbane	42 Vauxhall Street, Virginia QLD 4014
Cairns	399 Sheridan St, Cairns North QLD 4870
Perth	5 Kingscote St, Kewdale WA 6105



SHARE YOUR HOLIDAY WITH US!

Facebook: @cruisinmotorhomerentals
Instagram: @cruisinmotorhomes
TikTok: @cruisin_motorhomes



SCAN ME!



DANGER
OF NIGHT
DRIVING



**YOU ARE ON
HOLIDAY!**

DON'T SPOIL IT TONIGHT...



YOU CAN'T BLAME THE KANGAROOS...

Don't Drive At Night!

↑ High risk of **collision** with kangaroos and other wildlife.

↑ These animals are most active **between dusk and dawn** and often **cross roads unexpectedly**.

↑ Hitting a large animal can **severely damage your vehicle** and put **your safety** and your loved ones at serious risk.

If A Collision Occurs?

1 STOP THE VEHICLE

2 DO NOT DRIVE

3 CALL 1300 016 532 IMMEDIATELY

⚠ Driving the vehicle after an accident will cause the radiator to lose all coolant, which can result in **CATASTROPHIC engine failure**.

⚠ You must get your vehicle checked by an **authorised professional** before driving it again to stay safe and **keep your rental insurance VALID**.

⚠ Australia's **vast distances** mean that if you're involved in an accident—*whether with wildlife or otherwise*—it could take **several DAYS** to receive a **replacement vehicle** (only if available!).

**DON'T SPOIL YOUR HOLIDAY
BY DRIVING AT NIGHT...**



TABLE OF CONTENTS

SECTION 1: THINGS TO KNOW

FAQs	1
Free Camping	1
Campsites Nearby	2
Vehicle Exterior	3-4
Vehicle Keys	5
Fuel	6
AdBlue	7-8
Starting Your Vehicle	9
Electronic Park Brake	10
Windows & Blinds	11
Fire Emergencies & Vents	12
Smoke Alarms	13

SECTION 2: GETTING TECHNICAL

240-Volt Electrical System	14
Circuit Breakers	14
Troubleshooting Leads & Outlets	15
12 Volt Electrical System	16
Lights	17

SECTION 3: DAILY LIVING

Gas Bottle	18
Stove Top	19
Microwave	20
Fridge	21-22
Heater & Air Conditioning	23
Television (TV)	24-26
Bed Conversion	27-28

SECTION 4: COMFORT & MAINTENANCE

Fresh Water Tank & Water Access	
• Filling Your Freshwater Tank	29
• Water Pump	30
• Accessing Water Mains	30
Grey Water	31
Hot Water Heater	32
Toilet & Shower Use	33
Toilet Cassette	34
Changing A Wheel	35-36
Terms & Conditions Summary	37

Need Help?

Contact Our Friendly Roadside Team.



1300 016 532 (in Australia)



+61 361 691 702 (international)



roadside@cruisinmotorhomes.com.au

FAQS

ARE THERE DRIVING RESTRICTIONS?

All Cruisin' campervans and motorhomes **can only be driven on sealed/bitumen roads**. The only exceptions to this are well-maintained access roads of less than twelve (12) kilometres to recognised campgrounds and National Parks.

CAN WE SMOKE/VAPE IN THE VEHICLE?

Smoking and vaping are not permitted in any Cruisin' Motorhomes vehicles. Heavy penalties apply if traces of smoke are found in the vehicles.

CAN WE BRING OUR PETS?

Unfortunately, pets are not permitted in Cruisin' vehicles - with the exception of registered guide dogs.

WHAT HAPPENS IF I GET A FLAT TYRE?

All Cruisin' motorhomes are equipped with a spare tyre and tools for easy on-the-go fixes. If you need help, call our roadside assistance team.

See flat tyre section to learn how to change the tyre yourself.

HOW OFTEN SHOULD I STAY AT A POWERED SITE?

You should connect to a 240-volt mains outlet at a caravan park **every second night**.

In addition to charging the house battery, **you can only operate the power points, microwave, and heater/air conditioner** on board **when you're connected to mains power at a powered campsite**.

CAN I EXTEND MY TRIP?

Yes! Call our reservations team on 1300 664 485 to organise any rental extensions (subject to availability).

FREE CAMPING IN AUSTRALIA

Depending on what state you are travelling in **there are various restrictions on where you can and cannot free camp**. Tasmania is great for free camping, but Brisbane and areas of New South Wales (such as Byron Bay) tend to be stricter.

For further information contact your selected state's council or research campsites on authorised tourism websites.

ALL FAQs!





CAMPSITES NEAR OUR BRANCHES

HOBART, TAS

Barilla Holiday Park

Address: 75 Richmond Road, Cambridge 7170

Distance from branch: 3.4km

Phone: (03) 6248 5453

Email: stay@barilla.com.au

MELBOURNE, VIC

Discovery Parks Melbourne

Address: 129 Ashley Street, Braybrook 3019

Distance from branch: 16km

Phone: 1800 061 444

Email: melbourne@discoveryparks.com.au

SYDNEY, NSW

Sydney Tourist Park

Address: 2 Wingello Road, Miranda NSW 2228

Distance from branch: 2.5km

Phone: +61 2 9522 7143

Email: info@sydneytouristpark.com.au

BRISBANE, QLD

Bell's Caravan Park

Address: 39 Thompson Cres, Clontarf QLD 4019

Distance from branch: 16km

Phone: (07) 3283 2317

Email: bellscaravanpark@moretonbay.qld.gov.au

CAIRNS, QLD

NRMA Cairns Holiday Park

Address: 12-30 Little St, Manunda QLD 4870

Distance from branch: 3.5km

Phone: 1300 414 448

Email: info@nrmaparksandresorts.com.au

PERTH, WA

Perth Tourist Caravan Park

Address: 186 Hale Rd, Forrestfield WA 6058

Distance from branch: 5.7km

Phone: 1800 626 677

Email: perth@discoveryparks.com.au



MOTORHOME EXTERIOR

SECTION 1: THINGS TO KNOW

1. 240V Power Inlet
2. Hot Water Vent
3. Toilet Cassette
4. Grey Water Outlet
5. Diesel Tank and AdBlue
6. External Step
7. Fresh Water Tank
8. Mains Water Inlet





VEHICLE KEYS

KEY FOB *(Push-Start Models)*

Use the provided key fob to start your vehicle. The key fob enables push-button ignition, so you don't need to insert a physical key into the ignition barrel. To start:

- Press the **brake pedal** firmly.
- Then press the **Start/Stop button** on the dashboard while the fob is inside the vehicle.



TOILET CASSETTE

Use this key with THETFORD engraving to lock or unlock the vehicle's toilet cassette compartment.



LP GAS STORAGE

Use this key with THETFORD engraving to lock or unlock the vehicle's LP gas storage compartment.



FRESH WATER TANK

Use this small black and gold key to lock or unlock the vehicle's freshwater filling point.



FUEL

DIESEL FUEL

THIS MOTORHOME ACCEPTS DIESEL FUEL ONLY. DO NOT FILL WITH ANY OTHER FUEL OR LIQUID.

The fuel filling point is located next to the passenger door. The diesel tank cap (image 1) is marked with **DIESEL**.



IMAGE 1: FUEL CAP

IF YOU FILL THE VEHICLE WITH UNLEADED, WATER, OR ADBLUE, DO NOT START THE VEHICLE. CALL CRUISIN' ROADSIDE IMMEDIATELY.

On certain models, you need to open the passenger's side cabin door first to allow the fuel tank's lid to open. Once the lid is opened, turn the diesel cap anti-clockwise to unlock. Once filled with **DIESEL**, place the fuel cap on the inlet and turn it clockwise to lock it. **Shut the fuel tank's lid after refueling.**

Turn the diesel cap **anti-clockwise to unlock (image 2)** and **clockwise to lock (image 3)**.



IMAGE 2 (UNLOCK)



IMAGE 3 (LOCK)

AD BLUE

WHAT IS ADBLUE

ADBLUE IS NOT A DIESEL FUEL ADDITIVE, AND MUST NEVER BE ADDED TO OR MIXED WITH DIESEL UNDER ANY CIRCUMSTANCES.

Your motorhome is fitted with an **AdBlue system** that helps **reduce exhaust emissions**. The system must be topped up periodically, and the frequency depends on **road conditions, driving behaviour, and engine use**. **There is no fixed refill interval.**

BLUE TANK

The vehicle has a dedicated 20-liter AdBlue tank, separate from the main fuel tank.

TOP UP FREQUENCY

The frequency of AdBlue top-ups will vary based on driving conditions and driving style, but generally, it's recommended to top it up every 5,000 to 15,000 kilometers.

REFILL

An AdBlue warning light on an LDV Deliver 9 indicates low AdBlue levels. A yellow light signifies low levels, while a red light signifies **critically low** levels requiring **immediate refill**. You can check the AdBlue level on the vehicle's dashboard, and it's recommended to refill when the level gets low, but before the warning light turns red.

CHECKING THE ADBLUE LEVEL MANUALLY

To check the AdBlue level:

- Use the **arrow buttons** on the steering wheel (image 2).
- Scroll through the driver information screen until you see the AdBlue level gauge.
- If the level is low, plan to refill as soon as possible. (image 3).

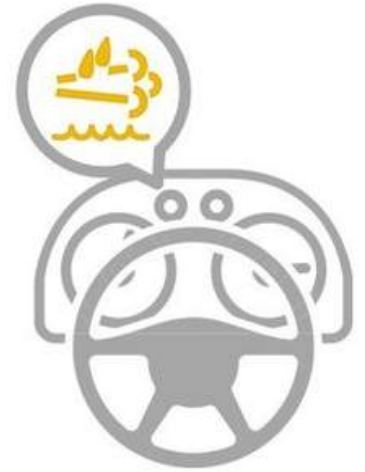 


IMAGE 1: ADBLUE SYMBOL



IMAGE 2

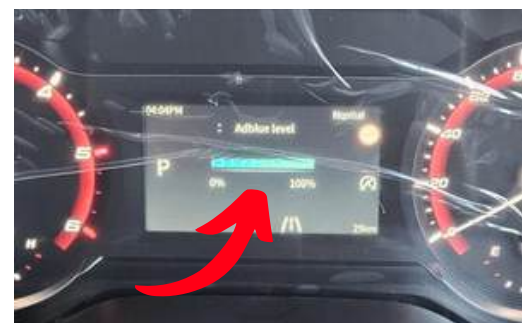 


IMAGE 3

AD BLUE

REFILLING THE ADBLUE TANK

The AdBlue filler cap is located underneath the Diesel filler cap (image 4). To open, turn the blue cap *counterclockwise* until it releases. You can fill up at a service station with an AdBlue pump (image 5), or you can purchase AdBlue containers from Supercheap Auto, Repco or similar auto retailers. **The tank holds 20 litres. It's best to fill to capacity whenever refilling.**



IMAGE 4: ADBLUE CAP (LOCK & UNLOCK)



IMAGE 5: ADBLUE PUMP

WHAT IF I FORGET TO REFILL?

If the AdBlue tank becomes empty:

- The vehicle **will not restart** until at least 5–10 litres of AdBlue have been added.
- To **reset the system**, once done refilling the AdBlue, drive for a short while, and the warning should disappear automatically.

Misfuelling the vehicle will result in very serious damage to the vehicle's engine, and you may be charged up to \$30,000.

IF YOU ARE UNSURE, PLEASE CONTACT CRUISIN' ROADSIDE AT 1300 016 532.

ADBLUE FUELLING LOCATIONS

Using your smartphone's camera, **please scan the QR code to get information about the nearby AdBlue filling locations.**

Or search: cruisinmotorhomes.com.au/find-adblue-fuel-stations



SCAN ME

DRIVER'S CABIN

STARTING YOUR VEHICLE *(Push-Start & Electronic Park)*

To start your vehicle:

- Place your right foot **firmly on the brake pedal**.
- With the key fob inside the vehicle, **press the Start/Stop button** to start the engine (image 1).

You'll see the dashboard display light up and show the gear mode.



IMAGE 1: START/STOP BUTTON

CHANGING GEARS *(Right-Hand Gear Selector)*

Your LDV motorhome uses a **right-hand gear selector** (image 2), mounted on the steering column.

- To engage **Drive (D)**: Push the gearstick downward.
- To engage **Reverse (R)**: Pull the gearstick upward.
- You'll see the gear mode (D, R, P...) displayed on the dashboard screen (image 3 and 4)



IMAGE 2: GEAR STICK



IMAGE 3: DRIVE (D)



IMAGE 4: PARK (P)

When you are in '**D**' position (image 3), **this means you are in drive mode and the vehicle is ready to be driven.**

ELECTRONIC PARK BRAKE

The electronic park brake is located on the switch panel to the right of the steering wheel, just beneath the front air vent.

To Operate:

- To **release the park brake**: *Push* the button once. The orange light will **turn off**, and the brake is disengaged (image 5).
- To **engage the park brake**: *Pull* the button gently. The orange light will **illuminate**, confirming the brake is on (image 6).



IMAGE 5: LIGHT OFF



IMAGE 6: LIGHT ON

REMEMBER TO RELEASE THE HANDBRAKE BEFORE YOU DRIVE.

| WINDOWS & BLINDS

| OPENING WINDOWS

To open the windows in your motorhome, press the button on the lever and turn the handle inwards (image 1). Once **all handles on the window are facing inwards** push the window out to the desired length (image 2).



IMAGE 1



IMAGE 2

To close the windows, lift slightly first then gently pull the window inwards. Turn the handles to the original lock position.

DO NOT PUSH THE WINDOW TOO FAR OUT AS IT WILL CAUSE THE WINDOW TO DISLOCATE FROM THE HINGES.

| OPENING BLINDS

The window blinds can be drawn for privacy.



VEHICLE EQUIPMENT

FIRE EXTINGUISHER

All vehicles are equipped with a dry chemical fire extinguisher. **The extinguisher is rated for both type B fires (grease and liquids) and type C fires (electrical).**

To activate the extinguisher, **pull the ring at the top of the bottle, aim the nozzle at the top of the flames and press down the lever.** Guide the nozzle from side to side to cover the entire width of the base of the flames.

THE FIRE EXTINGUISHER IS ATTACHED TO THE INTERIOR OF THE VEHICLE AT THE SIDE ENTRY.



OPENING VENTS

The motorhome's **vents can be opened** by releasing the latch and sliding the arm. **To close them**, lower the arm until the vent latches. **Always keep the vents closed when in transit.**



SMOKE ALARMS

All campervans and motorhomes are equipped with a smoke alarm for your safety and protection. The alarm is powered by a replaceable 09-volt battery. **If the battery does need to be replaced during your rental period, please purchase a new one,** keep your receipt and you will be refunded when you return the vehicle.

DO NOT DISCONNECT THE SMOKE ALARM FOR CONVENIENCE. IT MUST BE CONNECTED AT ALL TIMES FOR YOUR SAFETY.



 
POWER & ELECTRICITY

240-VOLT ELECTRICAL SYSTEM

This system runs the microwave, 240v power points, and air-conditioner. It also recharges the house battery.

You can charge your motorhome at a powered campsite at a caravan park. Connect the motorhome's 15 AMP electricity cord to a 240-volt external power source (image 1). The **listed devices will only work if you are connected to 240-volt power: Roof mounted aircon, microwave, power sockets to connect toaster, electric kettle, phone charger, etc.**

We recommend that you **charge the vehicle every second night** to keep the auxiliary battery working at its best.

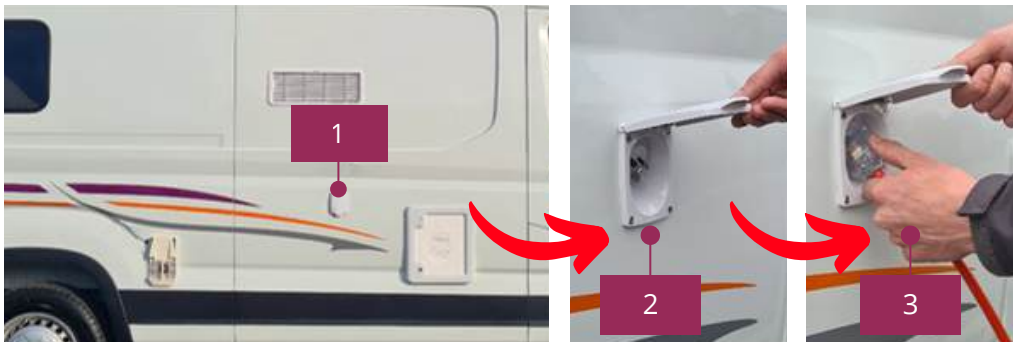

CIRCUIT BREAKERS

A circuit breaker protects the 240-volt outlets. This device is intended to protect you from electrical shock hazards when you are using electrical appliances. If you experience a power surge where the circuit breaker trips, **locate the circuit breaker inside the motorhome and switch it back to 'ON'** (image 1). A switch flicked up means the circuit breaker is ON.

The circuit breaker is located in the cupboard above the dinette seat.



IMAGE 1

TROUBLESHOOTING 240-VOLT POWER CONNECTION ISSUES

If you're having trouble connecting to 240-volt power, follow these steps:

1. Check the Motorhome's Circuit Breaker

- Locate the circuit breaker panel in your motorhome.
- Ensure that the circuit breaker for the 240-volt system is in the "ON/UP" position. Circuit breakers can sometimes trip due to overloads or faults.
- If the breaker is in the "OFF/DOWN" position, switch it back to "UP" and check if power is restored.
- If the breaker is in the "UP" position and power is still not available, the issue may lie elsewhere.

2. Test the Power Lead

- Remove the power lead from the motorhome's power inlet.
- Plug a portable device (e.g., mobile phone charger or toaster, etc) into the power lead.
- Check if the device works. If it does, the power lead is functioning correctly. If the device does not work, this may indicate a faulty power lead or an issue with the caravan park's power outlet.

3. Check the Park Outlet

- To verify that the caravan park's power outlet is functioning correctly, plug the device directly into the caravan park's power outlet.
- If the device still does not work, there may be an issue with the park's outlet.

4. Report the Issue

- If the park's outlet is not working, inform the caravan park staff. They will be able to address the problem with the park's power supply.
- If the caravan park outlet is working but there seems to be an issue with either the power cord or the motorhome's 240-volt system, please contact Cruisin Roadside Assistance for support.



12-VOLT ELECTRICAL SYSTEM

Your motorhome has two batteries, one in the engine compartment and one at the rear of the motorhome. The battery inside the motorhome is also called the auxiliary battery.

The auxiliary battery operates the TV, Water Pump, Fridge, Cooktop and Lights and is charged by both the alternator when the vehicle is being driven and the 240-volt system when it is plugged in to the Mains powered site.

The 12-volt switch panel is in the front cabinet above the fridge.

1. Use the 12V main switch to turn on the 12V power in the motorhome. This white-coloured switch (image 1) is located next to the switch panel. It must be left ON to use any 12V appliance in the motorhome, e.g., the fridge.

2. Turn on the switch of the appliance you want to use (image 2).



IMAGE 1



IMAGE 2

IF THE 12V MAIN SWITCH AND THE 12V APPLIANCE BUTTON ARE TURNED ON, BUT A SPECIFIC APPLIANCE DOES NOT ACTIVATE WHILE ALL OTHER 12V APPLIANCES FUNCTION CORRECTLY, THIS INDICATES THAT THE CIRCUIT BREAKER FOR THAT APPLIANCE HAS TRIPPED.

TO RESTORE POWER, PRESS THE CLEAR BUTTON LOCATED ABOVE THE APPLIANCE BUTTON ON THE SWITCH PANEL.

LIGHTS

Turn on the **outside light (image 3)** by pressing the switch on the 12-volt control panel (image 4).



IMAGE 3



IMAGE 4

To use the **inside lights**, hold down the **light button on the 12-volt panel** (image 5).



IMAGE 5

You can **operate each light directly** by turning on the button located on the device (image 6 & 7).



IMAGE 6



IMAGE 7

ONCE YOU HAVE FINISHED USING THE LIGHTS, TURN THEM OFF AT THE PANEL TO CONSERVE BATTERY POWER.

GAS BOTTLE

The gas bottle is located at the rear barn doors inside the LP gas storage compartment (see below).



To **open the gas bottle**, turn the valve fully in an anticlockwise direction. To **close the gas bottle**, turn the valve on top of the gas bottle in a clockwise direction until tight. Otherwise, just follow the instructions mentioned on the valve.

If you smell gas:

1. **Extinguish any open flames** and smoking materials.
2. **Do not touch any electrical switches.**
3. **Shut off the gas supply** at the gas bottle using the valve on top of the gas bottle.
4. **Open doors, windows, hatches** and any other ventilation openings.
5. **Leave the area** until the odour dissipates.
6. **Contact Cruisin' Motorhomes.**



NEVER DRIVE WITH THE GAS BOTTLE TURNED TO THE OPEN POSITION.

STOVE TOPS

HOW TO USE THE STOVE TOP

The stove top in the motorhome has an igniter switch. **Ignite the stove using the igniter switch rather than a match.**

1. **Locate the gas bottle beneath the rear seat** and turn the valve on top of the gas bottle fully to the 'open' position (image 1).
2. Turn on the cooktop switch on the 12-volt switchboard (image 2).
3. Open the stove top lid fully. Push in, hold down and turn the burner knob to your desired heat level.



IMAGE 1



IMAGE 2

The gas burners (image 3) in the vehicle operate on LPG. The basic operation is the same as a gas stove in a house.

However, the amount of oxygen in a motorhome is limited due to its size; therefore **always have sufficient ventilation when using the stove.**



IMAGE 3

4. **Whilst the burner knob is still being pushed in, press the igniter switch until the gas lights.** Keep holding down the burner knob.
5. Wait approximately 15 seconds before slowly releasing the burner knob. **If the flame extinguishes the burner knob may have been released too soon.** Start from step two and try again.

WARNING: IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.



MICROWAVE

OPERATING THE MICROWAVE

The microwave in your motorhome will only operate via 240-Volt power. This means that you must have the electric cord plugged into a powered site at a caravan park.

Please be aware that certain materials must not be put in the microwave.



NOT SAFE FOR MICROWAVE USE

- Paper bags – except things like popcorn bags which are designed to be microwaved – are a fire hazard.
- Aluminium foil.
- Never use dishes with metal rims.
- Plastic containers – can melt.
- Wire ties from bread and metal utensils.
- Styrofoam plates and cups – can melt.
- Glass jars – can shatter.

SAFE FOR MICROWAVE USE

- Microwavable glass, ceramic plates and bowls.
- Microwavable browning dishes.
- Microwavable plastic wrap, wax paper, paper towels and napkins.
- Paper plates and cups.

TROUBLESHOOTING THE MICROWAVE

Problem: Microwave is not working and there is no display.

- **Suggestion:** 240-Volt power is not plugged into an outlet. Check that the vehicle is connected to mains power and that the powered outlet is working.

Problem: Microwave is on (light on, turntable working) but is not heating food.

- **Suggestion:** Microwave may be broken. Please call Cruisin' Roadside for assistance.

Problem: Sparks or arcing when microwave is turned on.

- **Possible Cause:** Metal object in microwave.

FRIDGE

OPERATING THE FRIDGE

1. To use the fridge in your motorhome, turn the white-coloured 12V Main Switch and the Fridge switch on the 12V switch panel to the 'ON' position (image 1).



IMAGE 1

Next, turn 'ON' the fridge power source from the fridge control knob located in the freezer compartment (image 2). The fridge turns off at '0' (zero) and turns on at '1' (one).



IMAGE 2

THE FRIDGE DRAWS A LOT OF POWER, SO WE ADVISE THAT YOU PLUG THE VEHICLE INTO A POWERED CAMPSITE EVERY SECOND NIGHT TO CHARGE THE 12-VOLT AUXILIARY BATTERY.

ADJUSTING THE TEMPERATURE

Turn the fridge control knob to change the air temperature inside the refrigerator (image 3 & 4).

- Turn control to a **higher** number for **colder** temperatures.
- Turn control to a **lower** number for **less cold** temperatures.

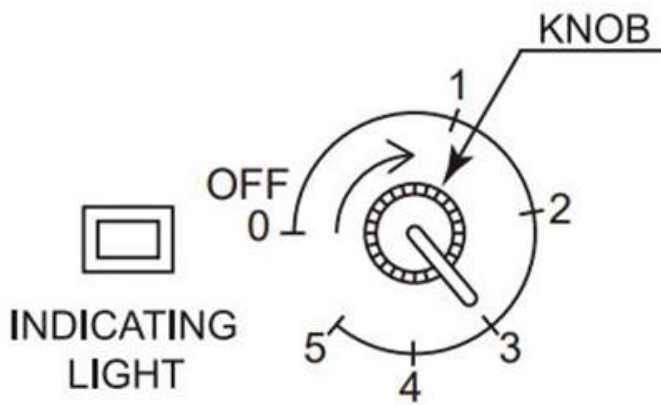 


IMAGE 3



IMAGE 4

TROUBLE SHOOTING

The fridge will stop functioning if the voltmeter in your motorhome reads below 12.0 volts. To resume operation in such a case, connect the vehicle to a 240V mains power supply to recharge the auxiliary battery.



TO CONSERVE BATTERY POWER, IT IS RECOMMENDED TO SET THE FRIDGE TO TEMPERATURE SETTING 03.

HEATER & AIR CONDITIONER

WEBASTO SYSTEM

This motorhome has a reverse-cycle air conditioner which will generate both hot and cold air.

1. Plug the vehicle into 240 Volt Mains Power.
2. Turn on the unit by pressing the power button on the remote control.
3. Select the mode and set the temperature using either the ↑ button (higher) or ↓ button (lower) (image 1).



IMAGE 1

USING THE AIR CONDITIONER IN HOT & HUMID CONDITIONS

In hot temperatures, the A/C May fluctuate in power due to issues with the 240-volt power source. This can cause internal fuses to blow which will result in the A/C not working.

When using the air conditioner in humid conditions, close all windows and doors when in use. Turn the temperature to 23 degrees ensuring the fan is turned to medium. Do not run it below this temperature.

By following these instructions, **you will minimise the chances of condensation that can cause the unit to overflow with water inside the motorhome.**

USING THE AIR CONDITIONER IN COLD CONDITIONS

The air conditioning units **may stop working once the temperatures reach below 4+ degrees.** If this occurs, wait for the temperature to rise and try again.

CHANGING AIRCON UNIT'S OPERATION MODES

Press MODE button on the remote to change the operating modes.

Symbol	Mode	Description
❄️	COOL Mode	– In COOL mode the air distributor shows the ❄️ symbol and the vehicle will be cooled.
💧	DRY Mode	– In DRY mode the unit is reducing the humidity inside the vehicle.
🌀	FAN Mode	– In FAN mode the indoor air is circulated through the vehicle without heating or cooling.
☀️	HEAT Mode	– In HEAT mode the air distributor shows the ☀️ symbol and the vehicle will be heated.
🔄	AUTO Mode	AUTO mode – In AUTO mode the unit automatically selects heating or cooling mode depending on the difference between current room temperature and set point temperature.

TELEVISION - MAJESTIC

PROGRAMMING THE TV

Each motorhome is equipped with a television for your entertainment. **The remote (image 2) for the television is located on the passenger seat in the main driver's cabin.**

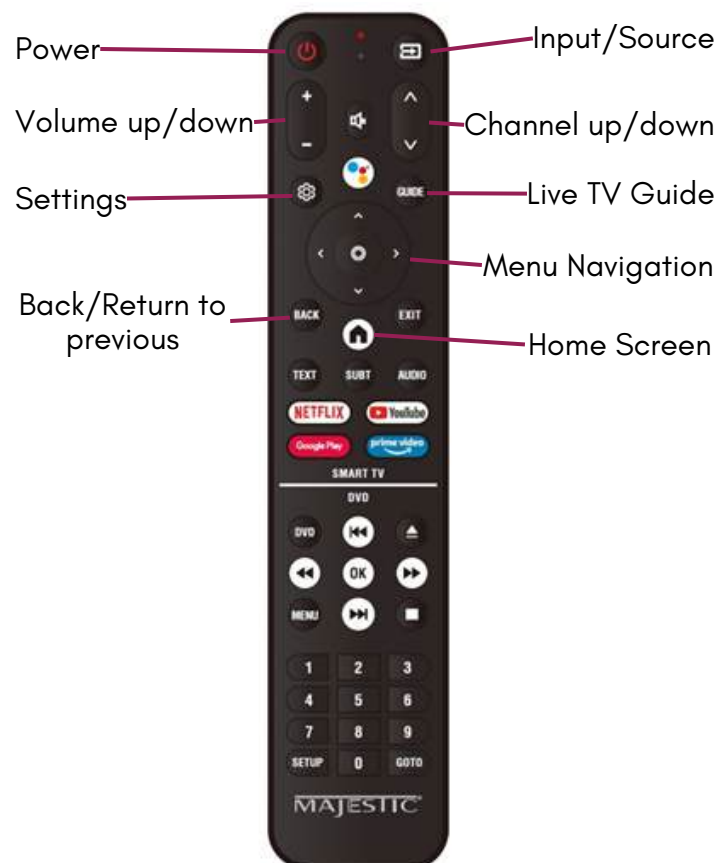 


IMAGE 2

How to program the Television:

1. Press the 'Power' button on the remote to turn the television on.
2. Press the 'Home' button then navigate to 'Live TV' (image 1).

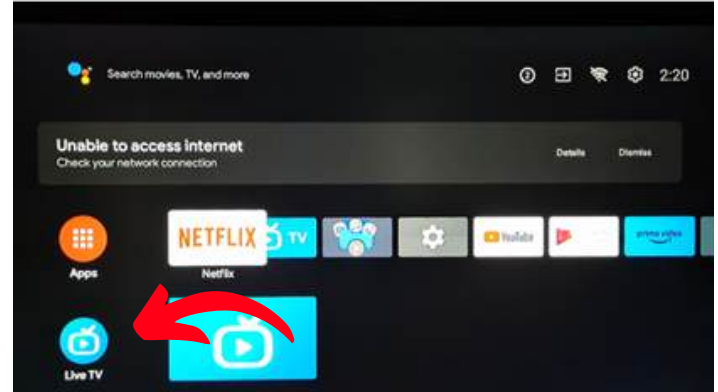 


IMAGE 1

3. Press the 'Settings' button on the remote.
4. Scroll down to 'Channel', press 'OK', then press 'OK' again on 'Channel Scan' (image 2).



IMAGE 2

5. Scroll down to 'Antenna Auto Scan' and press 'OK' (image 3).

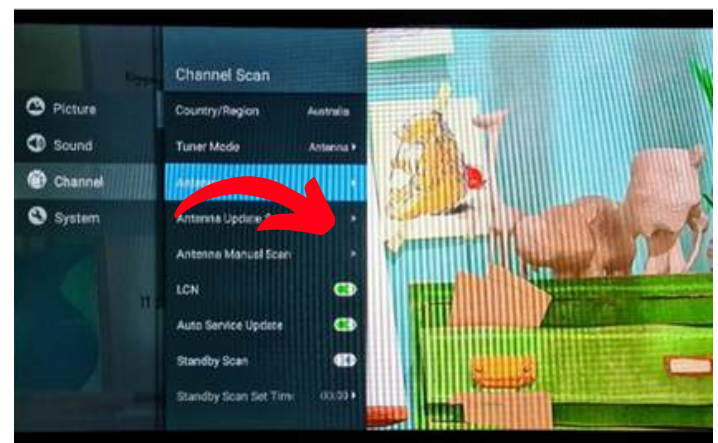 


IMAGE 3



6. Allow the television to tune (image 4).

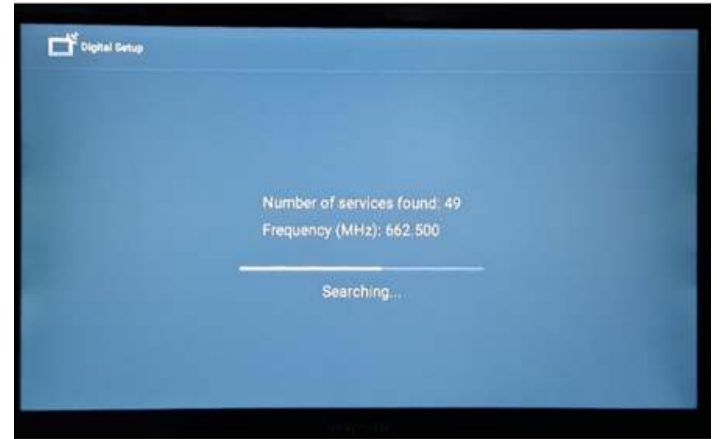 


IMAGE 4

7. When tuning is complete. You can see current broadcasts by pressing the 'Guide' button (image 5)



IMAGE 5

CRUISIN' CANNOT GUARANTEE RECEPTION. PLEASE ALSO BE AWARE THAT TELEVISION SIGNAL MAY BE WEAK IN RURAL OR MOUNTAINOUS AREAS.

BED CONVERSION

HOW TO MAKE THE BED

1. Remove the tabletop from the table leg by turning the top handle underneath the table in an **anti-clockwise direction for 3 turns** (image 1) and then remove the table from the pole (image 2).

Don't fully unwind the top handle; otherwise, it will remove itself from the mechanism.



IMAGE 1



IMAGE 2

2. Remove the table leg from its attachment point by pulling it away (images 3 & 4).



IMAGE 3



IMAGE 4

3. Insert the tabletop between the two seats so that it's resting on the edges (images 5 & 6).



IMAGE 5



IMAGE 6



4. Locate the **second bed base behind the driver's seat** and place it along with the table base to form the bed support (images 7 & 8).



IMAGE 7



IMAGE 8

5. **Remove the backrest cushions (images 9, 10 & 11)** and place them in the centre as shown below to form the bed (image 12).



IMAGE 9



IMAGE 10



IMAGE 11



IMAGE 12

FRESH WATER TANK & WATER ACCESS

FILLING THE TANK

This motorhome has a freshwater system, **including a water pump and freshwater tank**. The water tank has an **85-litre capacity** and is located outside the motorhome on the driver's side of the vehicle.

1. **Unlock** the 'water' compartment **with the small gold CAMEC key on your key ring** (image 1 & 2).



IMAGE 1



IMAGE 2

2. Remove the **white cap** from the water inlet (image 3)



IMAGE 3

3. **Remove keys from the lock before filling the tank.** Place the **bare end** of the water hose into the tank and **connect the hose to the tap** to fill it with fresh water (image 4).



IMAGE 4

Do not use too much pressure when filling the tank as the tank must be vented when filling. In the event of an airlock, simply remove the hose, reinsert it and fill slowly again.

When your tank is full the water will start to overflow from the water inlet. **Cruisin' recommends that you fill up your freshwater tank as often as possible.**

THE WATER PUMP

Once you have water in your tank, find the 12-volt switch panel in the cabinet (image 5), flick the 'water pump' button down. The pump operates as part of the 12-volt system. **When you are not using the water pump, ensure you turn it off.** You must have this button ON to operate the kitchen tap, shower and the flush for the toilet.



IMAGE 5

**DO NOT USE THE PUMP WHEN THE WATER TANK IS EMPTY.
CONTINUOUS USE WITH A DRY TANK WILL DAMAGE THE PUMP &
CAUSE AN AIR LOCK.**

MAINS WATER ACCESS

The motorhome also has a mains water access point where you can **use water supply directly from the outside tap.**

1. **To start using mains water**, locate the hose in the rear storage compartment and remove the adaptor fitting (image 6).



IMAGE 6

2. Locate the **mains water inlet on the driver's side and connect the hose** (image 7).



IMAGE 7

- Mains water supply **will NOT fill your water tank.**
- When using the mains water supply, don't have the pump turned on. **If you have the pump on the water will come from the fresh water tank** and NOT from the mains water supply.
- Please **make sure your water pump has been turned 'off'** from the 12-Volt switchboard when using Mains water.
- **Do NOT turn on the caravan park's mains water tap at maximum pressure.** Always use the mains water on medium or low pressure. **Excessively high pressure may cause damage to the mains water fittings and cause a water leak.**

GREY WATER

EMPTYING YOUR GREY WATER TANK

1. Collect the grey water hose from the storage shelf.
2. **Firmly attach the hose to the outlet by pulling down the silver levers** on each side of the hose (image 1 & 2).



IMAGE 1



IMAGE 2

3. Place the other end of the hose into the dump station disposal opening and **open the tank by turning the red lever** so it is parallel with the pipe (image 3). **Wait for it to empty.**



IMAGE 3

4. Close the lever (image 4).
5. Remove the hose and stow in the storage compartment.



IMAGE 4

TROUBLE SHOOTING YOUR GREY WATER

In the event that the grey water tank is blocked, try to insert a hose into the grey water outlet as far as it reaches. Turn the hose onto maximum pressure and run the water into the tank until it is full. Remove the hose and the grey water should flow. Repeat if necessary until blockage has been removed.

YOU MUST EMPTY YOUR GREY WATER TANK BEFORE YOU RETURN THE VEHICLE.

THE HOT WATER HEATER

HOW TO USE

1. Turn on the pump or mains water. If the vehicle is *plugged into 240v power*, the hot water will start to heat **automatically**. It will take approximately 30 minutes to heat.

To use the water heater *on LPG*, **turn on the gas bottle** located on the driver's exterior side and **ensure that the valve is fully open (image 1)**.

You must turn the valve on the gas bottle anticlockwise to open and clockwise to close. **The system will not operate if there is not enough gas in the bottle or the valve is not fully open.**

2. Turn on the hot water switch and water pump switch on the **12-volt control panel (image 2)**.

3. Push the 'Boiler' switch up to **60 degrees (image 3)**.

4. A red light will flash briefly on the 'Boiler' switch. It should then go out indicating that the system is working. **If the solid red light comes back on, it indicates that the burner has not ignited** and if this does happen, turn everything off, reset the switch to neutral and try again.

You can repeat this a maximum of 3 times. If ignition is not achieved by the 3rd attempt, leave the system for 10-15 minutes before trying again.



IMAGE 1



IMAGE 2



IMAGE 3

THIS WILL HEAT YOUR WATER IN THE SHOWER AND SINK. IT WILL TAKE APPROXIMATELY 30 MINUTES BEFORE THE WATER IS HEATED & READY FOR USE.

SHOWER & TOILET USE

HOW TO USE SHOWER

The shower head is mounted over the toilet (images 1 & 2). **Refer to the water heater section to heat the water before use.**



IMAGE 1



IMAGE 2

HOW TO USE TOILET

1. Turn on the water pump at the 12-volt switch (image 3)
2. **Push the lever open** (image 4), then **open the lid**.
3. **Press the blue button** (flush) for 1 second to wet the bowl (image 5).
4. After using the toilet, **hold the blue button** (flush) to rinse the toilet bowl (image 5).
5. **Close the lid, then close the lever** (image 4).



IMAGE 3



IMAGE 4



IMAGE 5

ENSURE THE TOILET LID IS CLOSED WHILST YOU'RE DRIVING.



THE TOILET CASSETTE

HOW TO EMPTY

To empty the cassette, first make sure the **lever is closed**. Then go outside, **lift the blue lever** and **pull** the entire cassette out of the vehicle (image 1).



IMAGE 1

CASSETTE MUST BE EMPTIED AND CLEANED BEFORE RETURNING THE VEHICLE TO THE DEPOT.

If the cassette is jammed or stuck, do not force it. Simply check that the toilet lever inside the vehicle is in the closed position.

Once the cassette is out of the vehicle, turn the pour-out spout and unscrew the cap (image 2). **You must dispose of the waste in a black water dump point.**



IMAGE 2

Once you have emptied the toilet cassette, rinse out the cassette and empty again, then **add a toilet chemical** along with about **a cup of water**. On your *last day of rental*, you don't need to add the chemicals and water; the cassette needs to be **completely empty**.

It is important that the cassette clicks back in to position as it must align with the toilet above.

NEVER HOSE OUT THE TOILET CASSETTE COMPARTMENT WHEN TRYING TO CLEAN OUT ANY DIRT OR LEAVES. ONLY USE A DAMP CLOTH TO CLEAN THE INSIDE OF THE COMPARTMENT.

CHANGING A WHEEL

ACCESSING TOOLBOX

The toolbox is behind the cover on the right-hand side of the driver's seat. Place both hands in the cutouts (image 1) and **pull firmly to release**. To remove the tools, wind the vehicle jack anti-clockwise and undo the Velcro straps (image 2). **Please ensure all tools are returned to their appropriate locations.**



IMAGE 1



IMAGE 2

ACCESSING SPARE WHEEL

Remove the blanking cap found at the rear step of the vehicle (image 3).



IMAGE 3

Use the crank handle in the toolkit to lower the spare wheel. Turn it anti-clockwise to lower and clockwise to raise (image 4).




IMAGE 4

CHANGING A WHEEL

HOW TO CHANGE A WHEEL

Jack can only be used at specific jacking points. The vehicle only needs to be **raised about 30cm**. **Everyone must leave the vehicle**. Do not place any portion of your body under a vehicle supported by a jack. The jack should be perpendicular to the vehicle while lifting.

 Whilst on firm and level ground, set your jack in the points near the wheel you're removing. Apply the jack auxiliary rotating extension bar and wheel nut wrench, then **turn until the jacking head enters the jacking point**. The jacking point for the front wheel is at the bolt head of the subframe and swing arm. With the jacking head at 45 degrees, you'll find the jacking point for the rear wheel on FWD models at the leaf spring (3); the jacking point for RWD models is at the rear axel (3).

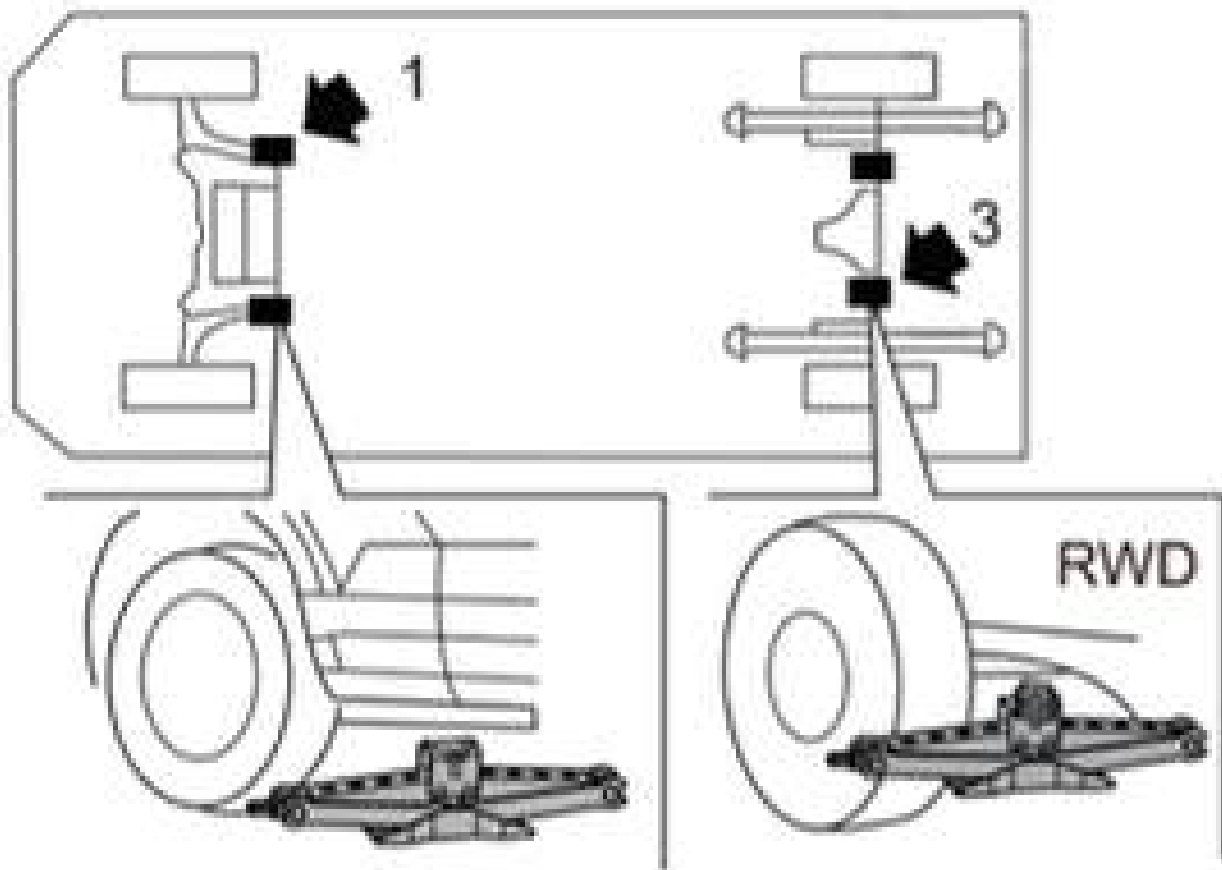

PLEASE CALL CRUISIN' ROADSIDE ASSISTANCE SO WE ARE AWARE THAT THE TYRE HAS BEEN REPLACED.

IF YOU NEED ANY HELP CHANGING THE TYRE, PLEASE LET US KNOW.



INFORMATION & CONDITIONS

Need Help?

Contact Our Friendly
Reservation Team.



1300 664 485 (in Australia)



+61 3 6248 4789 (international)



reservations@cruisinmotorhomes.com.au

DISCLAIMER: This is a summary of rental conditions and does not cover all key points and terms of your rental. Please see the full Terms & Conditions or call our reservations team.

FULL VERSION OF TERMS & CONDITIONS HERE

or visit cruisinmotorhomes.com.au



SCAN ME!



Thank you for choosing Cruisin' Motorhomes! Your safety and security are our greatest concern, so to assist you in making your holiday a great experience, it is important for you to carefully read the Summary of Rental Conditions. **This page contains a summary of our Rental Terms and Conditions and should not be regarded as the entire Rental Agreement.**

FINES FOR SPEEDING, TOLLS, & OTHER INFRINGEMENTS

Cruisin' reserves the right to submit a statutory declaration to the issuing authority and/or charge the customer for any speeding, toll way, parking or other offences. Also, Cruisin' reserves the right to charge an **additional administration fee of up to \$55 per offence.**

TRAVEL INSURANCE

We strongly recommend that renters take out the highest level of Travel Insurance. **Cruisin' does not accept liability for personal injuries.**

VOLUNTARY DOWNGRADES

Should you decide to downgrade the vehicle within 14 days of pick up or during the rental, **you will not be entitled to a refund.**

LATE RETURN

You must request an extension. Failure to do so will result in a late fee of AU\$150 per day plus the daily rental rate and the daily rate of your Liability Reduction every day until the vehicle is returned. The rental rate charged will be based on the current rates of the day, so they may differ from your original booking. **These charges will be applied to your credit card on a daily basis until the vehicle is returned.**

RENTAL EXTENSION

If you wish to extend the rental, you may call our reservations team. Any extensions will be charged at the current rental rate at that time. This request is subject to availability.

ROAD RESTRICTIONS

All Cruisin' vehicles **can only be driven on sealed/bitumen roads.** The **only exceptions are well-maintained roads of less than twelve (12) kilometres to recognised campgrounds.** Cruisin' reserves the right to restrict vehicle movements due to adverse road or weather conditions, and if the distance is greater than the length of your rental period.

OUT OF HOURS RETURN MAX COVER ONLY

Customers wishing to return their Vehicle on a Sunday when the branch is closed can **request an Out of Hours Return between 8am - 3.30pm (standard rates apply).**

REPAIRS & DAMAGE

You are permitted to conduct any repair up to \$100 (including GST) - all that is needed for full reimbursement is the receipt for the amount of the repairs. For repairs over \$100, call Cruisin' Roadside. **Damages to the vehicle itself may be subject to liability depending on your cover type.**

