



2 BERTH SANDPIPER (ADBLUE) USER GUIDE

ROADSIDE ASSISTANCE

 1300 016 532 (international +61 361 691 702)

 roadside@cruisinmotorhomes.com.au

RESERVATIONS OFFICE

 1300 664 485 (international +61 3 6248 4789)

 reservations@cruisinmotorhomes.com.au



THANK YOU FOR CHOOSING CRUISIN' MOTORHOMES!

ABOUT US

Cruisin' Motorhomes is an expert travel business with a personal touch and years of experience.

We are a home-grown hire company offering a range of fully-equipped campervans and motorhomes – the ideal vehicles for self-driven adventures across Australia.

BE A SAFE DRIVER FOLLOW THE RULES

-  Don't Drive At Night
-  Make Frequent Stops
-  Drive On The Left Side Of The Road
-  Everyone Must Wear A Seatbelt
-  Pull Off The Road When Taking Photos Or Reading Maps
-  Slow Down On Dangerous Roads
-  Obey The Speed Limit
-  Slow Down And Watch For Wildlife
-  Never Use Your Phone While Driving

ALL BRANCH LOCATIONS

Hobart	3 Runway Pl, Cambridge TAS 7170
Melbourne	25-27 Catalina Dr, Tullamarine VIC 3043
Sydney	10 Wurrook Circuit, Caringbah NSW 2229
Brisbane	42 Vauxhall Street, Virginia QLD 4014
Cairns	399 Sheridan St, Cairns North QLD 4870
Perth	5 Kingscote St, Kewdale WA 6105



SHARE YOUR HOLIDAY WITH US!

Facebook: @cruisinmotorhomerentals
Instagram: @cruisinmotorhomes
TikTok: @cruisin_motorhomes



SCAN ME!



DANGER
OF NIGHT
DRIVING



**YOU ARE ON
HOLIDAY!**

DON'T SPOIL IT TONIGHT...



YOU CAN'T BLAME THE KANGAROOS...

Don't Drive At Night!

↑ High risk of **collision** with kangaroos and other wildlife.

↑ These animals are most active **between dusk and dawn** and often **cross roads unexpectedly**.

↑ Hitting a large animal can **severely damage your vehicle** and put **your safety** and your loved ones at serious risk.

If A Collision Occurs?

1 **STOP THE VEHICLE**

2 **DO NOT DRIVE**

3 **CALL 1300 016 532 IMMEDIATELY**

! Driving the vehicle after an accident will cause the radiator to lose all coolant, which can result in **CATASTROPHIC engine failure**.

! You must get your vehicle checked by an **authorised professional** before driving it again to stay safe and **keep your rental insurance VALID**.

! Australia's **vast distances** mean that if you're involved in an accident—*whether with wildlife or otherwise*—it could take **several DAYS** to receive a **replacement vehicle** (only if available!).

**DON'T SPOIL YOUR HOLIDAY
BY DRIVING AT NIGHT...**



TABLE OF CONTENTS

SECTION 1: THINGS TO KNOW

FAQs	1
Free Camping	1
Campsites Nearby	2
Vehicle Exterior	3-4
Vehicle Keys	5-6
Fuel	7
Ad Blue	8-9
Starting Your Vehicle	10-11
Fire Emergencies	12
Smoke Alarms	13
Inside Table	14
Windows & Vents	15
Entry Step	16

SECTION 2: GETTING TECHNICAL

240-Volt Electrical System	17
Circuit Breakers	17
Troubleshooting Leads & Outlets	18
12 Volt Electrical System	19
Lights	20

SECTION 3: DAILY LIVING

Gas Bottle	21
Stove Top	22
Microwave	23
Fridge	24-25
Privacy Curtain	26
Television (TV)	27-28
Heater & Air Conditioning	29-30

SECTION 4: COMFORT & MAINTENANCE

Fresh Water Tank & Water Access	
• Filling Your Freshwater Tank	31
• Water Pump	32
• Accessing Water Mains	32-33
Grey Water	34
Hot Water Heater	35
Toilet & Shower Use	36
Toilet Cassette	37
Changing A Wheel	38-39
Terms & Conditions Summary	40

Need Help?

Contact Our Friendly Roadside Team.



1300 016 532 (in Australia)



+61 361 691 702 (international)



roadside@cruisinmotorhomes.com.au

FAQS

ARE THERE DRIVING RESTRICTIONS?

All Cruisin' campervans and motorhomes **can only be driven on sealed/bitumen roads**. The only exceptions to this are well-maintained access roads of less than twelve (12) kilometres to recognised campgrounds and National Parks.

CAN WE SMOKE/VAPE IN THE VEHICLE?

Smoking and vaping are not permitted in any Cruisin' Motorhomes vehicles. Heavy penalties apply if traces of smoke are found in the vehicles.

CAN WE BRING OUR PETS?

Unfortunately, pets are not permitted in Cruisin' vehicles - with the exception of registered guide dogs.

ALL FAQs!



WHAT HAPPENS IF I GET A FLAT TYRE?

All Cruisin' motorhomes are equipped with a spare tyre and tools for easy on-the-go fixes. If you need help, call our roadside assistance team.

See flat tyre section to learn how to change the tyre yourself.

HOW OFTEN SHOULD I STAY AT A POWERED SITE?

You should connect to a 240-volt mains outlet at a caravan park **every second night**.

In addition to charging the house battery, **you can only operate the power points, microwave, and heater/air conditioner** on board **when you're connected to mains power at a powered campsite**.

CAN I EXTEND MY TRIP?

Yes! Call our reservations team on 1300 664 485 to organise any rental extensions (subject to availability).

FREE CAMPING IN AUSTRALIA

Depending on what state you are travelling in **there are various restrictions on where you can and cannot free camp**. Tasmania is great for free camping, but Brisbane and areas of New South Wales (such as Byron Bay) tend to be stricter.

For further information contact your selected state's council or research campsites on authorised tourism websites.





CAMPSITES NEAR OUR BRANCHES

HOBART, TAS

Barilla Holiday Park

Address: 75 Richmond Road, Cambridge 7170

Distance from branch: 3.4km

Phone: (03) 6248 5453

Email: stay@barilla.com.au

MELBOURNE, VIC

Discovery Parks Melbourne

Address: 129 Ashley Street, Braybrook 3019

Distance from branch: 16km

Phone: 1800 061 444

Email: melbourne@discoveryparks.com.au

SYDNEY, NSW

Sydney Tourist Park

Address: 2 Wingello Road, Miranda NSW 2228

Distance from branch: 2.5km

Phone: +61 2 9522 7143

Email: info@sydneytouristpark.com.au

BRISBANE, QLD

Bell's Caravan Park

Address: 39 Thompson Cres, Clontarf QLD 4019

Distance from branch: 16km

Phone: (07) 3283 2317

Email: bellscaravanpark@moretonbay.qld.gov.au

CAIRNS, QLD

NRMA Cairns Holiday Park

Address: 12-30 Little St, Manunda QLD 4870

Distance from branch: 3.5km

Phone: 1300 414 448

Email: info@nrmaparksandresorts.com.au

PERTH, WA

Perth Tourist Caravan Park

Address: 186 Hale Rd, Forrestfield WA 6058

Distance from branch: 5.7km

Phone: 1800 626 677


Email: perth@discoveryparks.com.au



MOTORHOME EXTERIOR

SECTION 1: THINGS TO KNOW

1. Fresh Water Tank
2. Mains Water Inlet
3. Toilet Cassette Cabinet
4. Grey Water Outlet
5. LP Gas Storage
6. 240V Power Inlet
7. Diesel Tank
8. Hot Water Vent
9. External Step

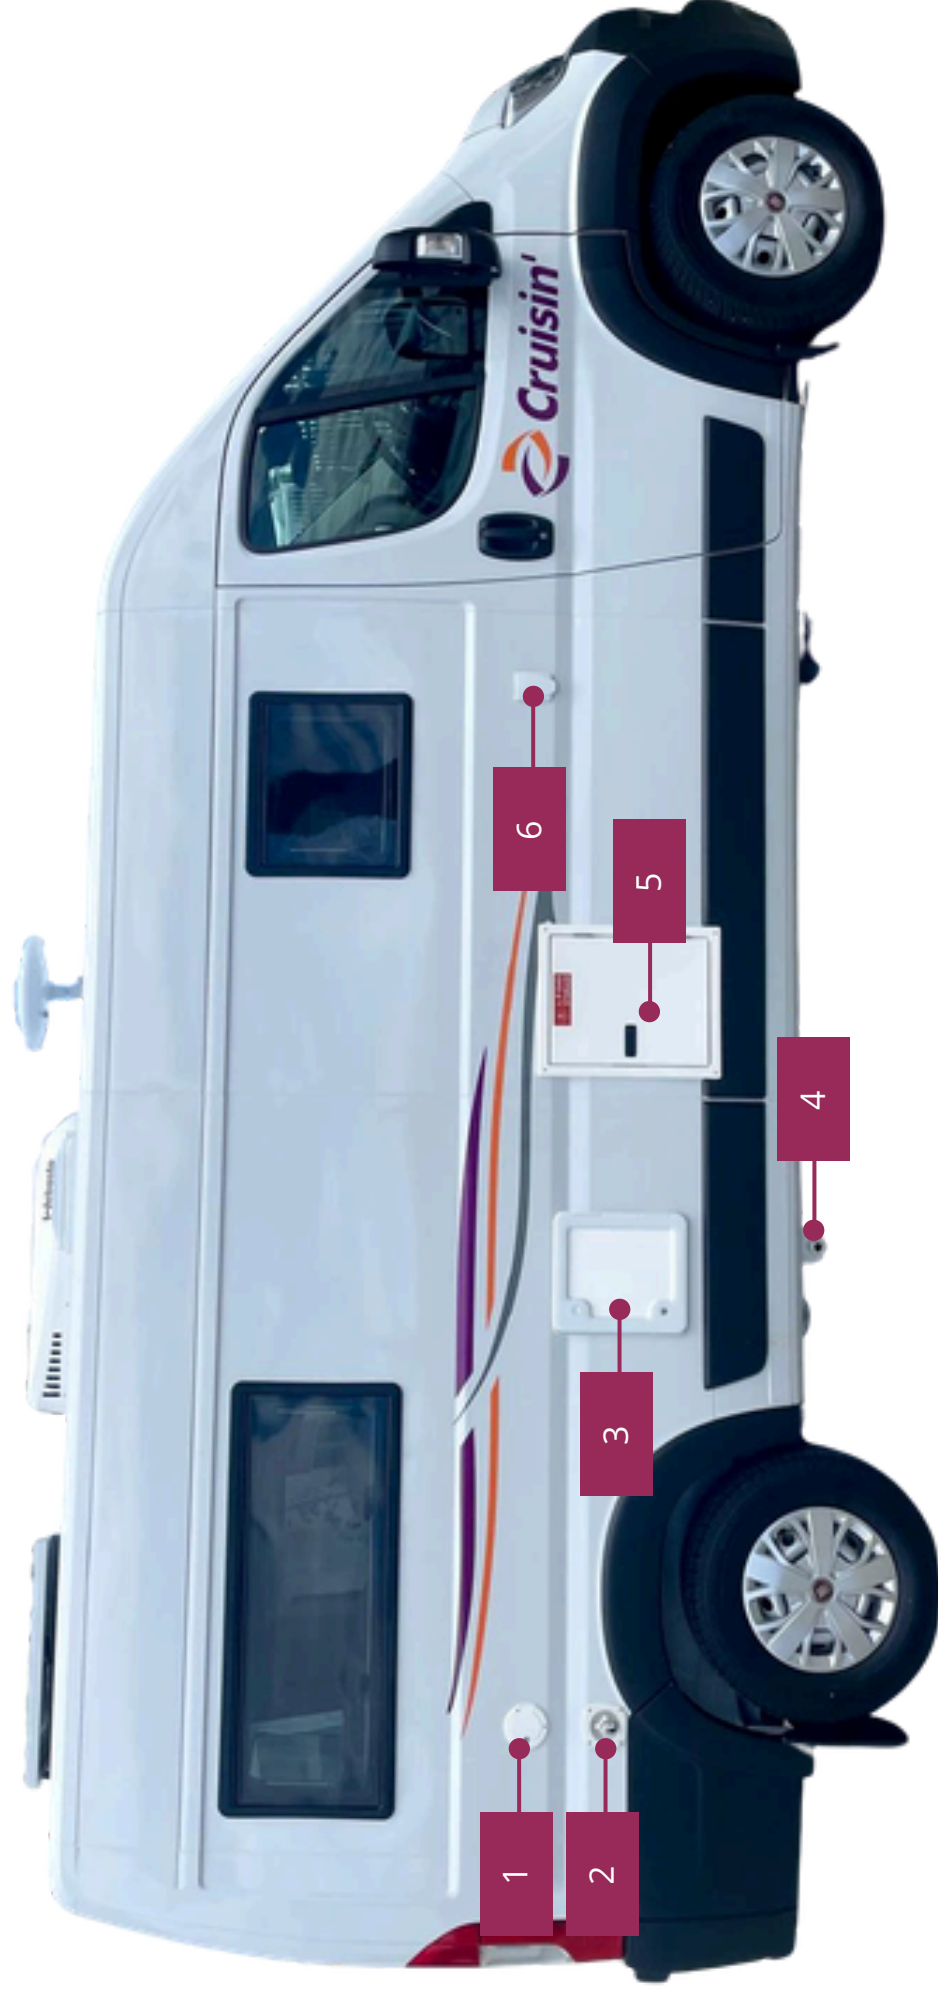



1300 016 532 (international +61 361 691 702)

VEHICLE KEYS

IGNITION KEY

Option 1: Standard Key

Option 2: Push to Start Fob



DIESEL TANK KEY

Use the key to lock and unlock the diesel fuel cap.


Option 1: Standard Key

Option 2: Push to Start Fob



FRESH WATER TANK

Use this small black and gold key to lock or unlock the vehicle's freshwater filling point.

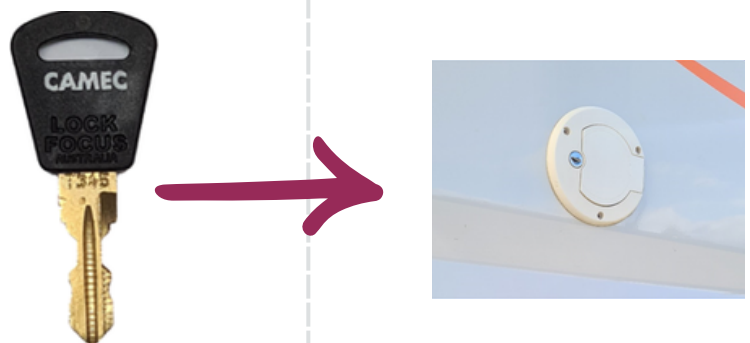

LP GAS STORAGE

Use the small round silver key to unlock or lock the LP gas storage compartment.



TOILET CASSETTE

Use this key with **THETFORD** engraving to lock or unlock the vehicle's toilet cassette compartment.



FUEL

DIESEL FUEL

THIS MOTORHOME ACCEPTS DIESEL FUEL ONLY. DO NOT FILL WITH ANY OTHER FUEL OR LIQUID.

The diesel cap is clearly marked with **"DIESEL"** and can be unlocked using the motorhome's ignition key. The fuel filling point is conveniently located next to the passenger door. To access the tank, open the fuel door manually, then **turn the ignition key anti-clockwise to unlock the cap**. Be sure to leave the key in the cap while refuelling to prevent misplacement.

After refuelling, replace the cap securely on the inlet, **turn the key clockwise to lock it**, and remove the key. Finally, close the fuel door.

IF YOU FILL THE VEHICLE WITH UNLEADED, WATER, OR ADBLUE, DO NOT START THE VEHICLE. CALL CRUISIN' ROADSIDE IMMEDIATELY.



IMAGE 2 (UNLOCK)



IMAGE 3 (FUEL CAP & INLET)



IMAGE 4 (LOCK)

AD BLUE

HOW TO FILL

ADBLUE IS NOT A DIESEL FUEL ADDITIVE, AND SHOULD NOT TO BE ADDED OR MIXED WITH DIESEL UNDER ANY CIRCUMSTANCES.

Approximately every 2,000 km your Motorhome's AdBlue will need to be refilled. Typically, an AdBlue warning light or message (image 5) will appear on your dashboard. This is a general alert that can be displayed sooner than needed. There is no immediate action needed with just this warning light (image 5).

When the AdBlue level is actually low, the vehicle's dashboard will show the estimated remaining range or mileage before the AdBlue runs out (image 6). This range usually starts around 500 kilometres, giving you ample time to refill your AdBlue tank.

Once the AdBlue refill range appears on the odometer screen, locate the nearest fuel station or auto shop that sells AdBlue and refill the vehicle promptly. We recommend using a fuel station bowser for refilling, as it is generally more cost-effective than buying AdBlue from an auto shop.

Failure to refill the AdBlue tank within the kilometre range shown on the dashboard will result in the vehicle being unable to be started until the vehicle is towed to a dealer for reset. We recommend refilling the tank until it is full, not just topping up.



IMAGE 5

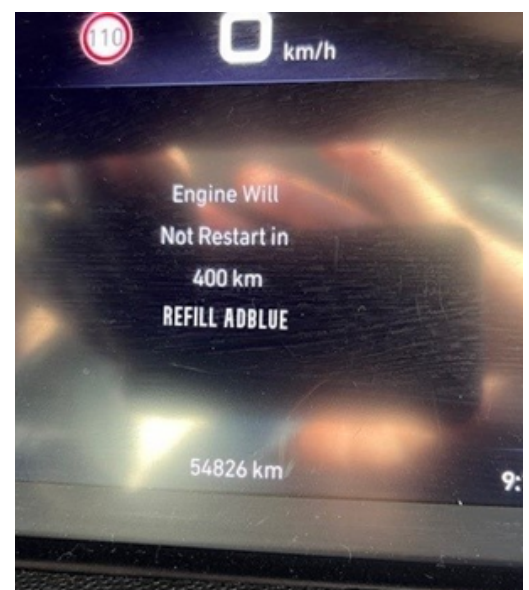


IMAGE 6

AD BLUE

HOW TO FILL

The AdBlue filler cap is below the Diesel filler cap (image 1). You can fill up at a service station that has an AdBlue pump or you can purchase AdBlue from most auto part stores such as Supercheap Auto or Repco.



IMAGE 1



After filling up, turn the ignition to the ON position, **wait for the warning lights on the dash to go out before starting the engine.** The warning lights can take up to 2 minutes to clear.

Misfuelling the vehicle will result in very serious damages to the vehicle's engine, and you may be charged up to \$30,000.

IF YOU ARE UNSURE, PLEASE CONTACT CRUISIN' ROADSIDE.

ADBLUE FUELLING LOCATIONS

Using your smartphone's camera, **please scan the QR code below to get information about the nearby AdBlue filling locations.**

Or search: cruisinmotorhomes.com.au/find-ad-blue-fuel-stations



SCAN ME

DRIVER'S CABIN

STARTING YOUR VEHICLE

To start the vehicle, the **gear stick must be in Parking Mode** (image 1) and your right foot placed firmly on the brake pedal. The dashboard will display a 'P' indicating that the vehicle is in parking gear (image 2). Start the vehicle using the ignition key.



IMAGE 1



IMAGE 2

With your right foot still on the brake push the gear stick into the '**D**' position (image 3). You will get the letter 'D' on the dashboard display (image 4). **This means you are in drive mode and the vehicle is ready to be driven.**

When you are ready to take off, **release the handbrake**, remove your right foot from the brake and place it on the accelerator to propel the vehicle forward.



IMAGE 3



IMAGE 4

HANDBRAKE

The **electronic handbrake is located on the right side** of the steering wheel column. **When engaged**, the handbrake sign on the dash and the handbrake control light on the handbrake switch will illuminate.



IMAGE 5 (HANDBRAKE RELEASED)



IMAGE 6 (HANDBRAKE ENGAGED)

The handbrake can be **engaged or released by toggling the handbrake switch**, either by pressing it inward or pulling it outwards.

To release the handbrake, press the switch inwards (image 7).



IMAGE 7

To engage the handbrake, pull the switch outwards (image 8).



IMAGE 8

REMEMBER TO RELEASE THE HANDBRAKE BEFORE YOU DRIVE.
IF THE SEATBELT IS NOT FASTENED, THE VEHICLE WILL AUTOMATICALLY
APPLY THE HANDBRAKE IF DRIVEN.

VEHICLE EQUIPMENT

FIRE EXTINGUISHER

All vehicles are equipped with a dry chemical fire extinguisher. **The extinguisher is rated for both type B fires (grease and liquids) and type C fires (electrical).**

To activate the extinguisher, **pull the ring at the top of the bottle, aim the nozzle at the top of the flames and press down the lever.** Guide the nozzle from side to side to cover the entire width of the base of the flames.

THE FIRE EXTINGUISHER IS ATTACHED TO THE INTERIOR OF THE VEHICLE.



SMOKE ALARMS

All campervans and motorhomes are equipped with a smoke alarm for your safety and protection. The alarm is powered by a replaceable 09-volt battery. **If the battery does need to be replaced during your rental period, please purchase a new one,** keep your receipt and you will be refunded when you return the vehicle.



DO NOT DISCONNECT THE SMOKE ALARM FOR CONVENIENCE. IT MUST BE CONNECTED AT ALL TIMES FOR YOUR SAFETY.



INSIDE TABLE

To set up the table, release the black strap (image 1) and lift the table along the guides until it lays flat (image 2).



IMAGE 1



IMAGE 2

WINDOWS & VENTS

OPENING WINDOWS

To open the windows in your motorhome, press the button on the lever and turn the handle inwards (image 1). Once **all handles on the window are facing inwards** push the window out to the desired length (image 2).



IMAGE 1



IMAGE 2

To close the windows, lift slightly first then gently pull the window inwards. Turn the handles to the original lock position.

OPENING VENTS

The motorhome's **vents can be opened** by releasing the latch and sliding the arm. **To close them**, lower the arm until the vent latches.

Always keep the vents closed when in transit.





ENTRY STEP

OUTDOOR STEP

Pull down the **outside** step from under the sliding door to allow for easy access to the motorhome (images 4 & 5).

To use, press the clip underneath the step and slide outwards. **When you no longer need the step, simply push it firmly back underneath the vehicle.**



IMAGE 4



IMAGE 5

Some Sandpipers are equipped with electric side doorsteps which should not be open or closed with your hand. **The switch to operate the side step is located on the right-hand wall.**

MAKE SURE THAT YOU PUSH STEP BACK IN WHEN DRIVING.

ELECTRIC OUTDOOR STEP

Some Sandpipers are equipped with an electric side doorstep. Please make sure you press the down button to open the step and the up button to close the step. The switch to operate the side step is located on the righthand wall above the vehicle's entry point.

DO NOT TRY TO MANUALLY OPEN OR CLOSE THE ELECTRIC STEP.



POWER & ELECTRICITY

240-VOLT ELECTRICAL SYSTEM

This system runs the microwave, 240v power points, and air-conditioner. It also recharges the house battery.

You can charge your motorhome at a powered campsite at a caravan park. Connect the motorhome's 15 AMP electricity cord to a 240-volt external power source (image 1). The **listed devices will only work if you are connected to 240-volt power: Roof mounted aircon, microwave, power sockets to connect toaster, electric kettle, phone charger, etc.**

We recommend that you **charge the vehicle every second night** to keep the auxiliary battery working at its best.



IMAGE 1

CIRCUIT BREAKERS

A circuit breaker protects the 240-volt outlets. This device is intended to protect you from electrical shock hazards when you are using electrical appliances. If you experience a power surge where the circuit breaker trips, **locate the circuit breaker inside the motorhome and switch it back to 'ON'** (image 2). A switch flicked up means the circuit breaker is ON.

The circuit breaker is located in the cupboard above the dinette seat.



IMAGE 2



TROUBLE SHOOTING

If you're having trouble connecting to 240-volt power, follow these steps:

1. Check the Motorhome's Circuit Breaker

- Locate the circuit breaker panel in your motorhome.
- Ensure that the circuit breaker for the 240-volt system is in the "ON/UP" position. Circuit breakers can sometimes trip due to overloads or faults.
- If the breaker is in the "OFF/DOWN" position, switch it back to "UP" and check if power is restored.
- If the breaker is in the "UP" position and power is still not available, the issue may lie elsewhere.

2. Test the Power Lead

- Remove the power lead from the motorhome's power inlet.
- Plug a portable device (e.g., mobile phone charger or toaster, etc) into the power lead.
- Check if the device works. If it does, the power lead is functioning correctly. If the device does not work, this may indicate a faulty power lead or an issue with the caravan park's power outlet.

3. Check the Park Outlet

- To verify that the caravan park's power outlet is functioning correctly, plug the device directly into the caravan park's power outlet.
- If the device still does not work, there may be an issue with the park's outlet.

4. Report the Issue

- If the park's outlet is not working, inform the caravan park staff. They will be able to address the problem with the park's power supply.
- If the caravan park outlet is working but there seems to be an issue with either the power cord or the motorhome's 240-volt system, please contact Cruisin Roadside Assistance for support.

12-VOLT ELECTRICAL SYSTEM

Your motorhome has two batteries, one in the engine compartment and one at the rear of the motorhome. The battery inside the motorhome is also called the auxiliary battery.

The auxiliary battery operates the TV, Water Pump, Cooktop and Lights and is charged by both the alternator when the vehicle is being driven and the 240-volt system when it is plugged in to the Mains powered site.

The 12-volt switch panel is in the front cabinet above the fridge.

1. Use the 12V main switch to turn on the 12V power in the motorhome. This white-coloured switch (image 1) is located next to the switch panel. It must be left ON to use any 12V appliance in the motorhome, e.g., the fridge.

2. Turn on the switch of the appliance you want to use (image 2).



IMAGE 1



IMAGE 2

IF THE 12V MAIN SWITCH AND THE 12V APPLIANCE BUTTON ARE TURNED ON, BUT A SPECIFIC APPLIANCE DOES NOT ACTIVATE WHILE ALL OTHER 12V APPLIANCES FUNCTION CORRECTLY, THIS INDICATES THAT THE CIRCUIT BREAKER FOR THAT APPLIANCE HAS TRIPPED.

TO RESTORE POWER, PRESS THE CLEAR BUTTON LOCATED ABOVE THE APPLIANCE BUTTON ON THE SWITCH PANEL.



LIGHTS

To turn on the **outside light** (image 3) by pressing the switch on the 12-volt control panel (image 4).



IMAGE 3



IMAGE 4

To use the **inside lights**, hold down the **light button** on the 12-volt panel (image 5).



IMAGE 5

You can **operate each light directly** by turning on the button located on the device (images 6 & 7).



IMAGE 6



IMAGE 7

ONCE YOU HAVE FINISHED USING THE LIGHTS, TURN THEM OFF AT THE PANEL TO CONSERVE BATTERY POWER.

GAS BOTTLE

The gas bottle is **located on the driver's side of the vehicle** in the LP gas storage compartment.



NEVER DRIVE WITH THE GAS BOTTLE TURNED TO THE OPEN POSITION.

To **open the gas bottle**, turn the valve fully in an anticlockwise direction (image 1). To **close the gas bottle**, turn the valve on top of the gas bottle in a clockwise direction until tight. Otherwise, just follow the instructions mentioned on the valve.

If you smell gas:

1. **Extinguish any open flames** and smoking materials.
2. **Do not touch any electrical switches.**
3. **Shut off the gas supply** at the gas bottle using the valve on top of the gas bottle.
4. **Open doors, windows, hatches** and any other ventilation openings.
5. **Leave the area** until the odour dissipates.
6. **Contact Cruisin' Motorhomes.**

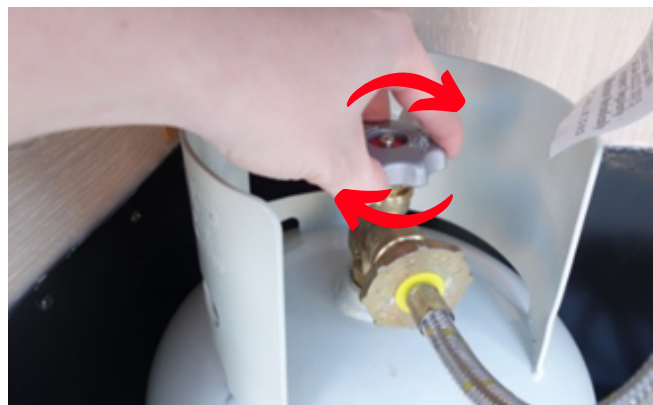


IMAGE 1



STOVE TOPS

HOW TO USE THE STOVE TOP

The stove top in the motorhome has an igniter switch. **Ignite the stove using the igniter switch rather than a match.**

1. **Locate the gas bottle beneath the rear seat** and turn the valve on top of the gas bottle fully to the 'open' position (image 1).
2. Turn on the cooktop switch on the 12-volt switchboard (image 2).
3. Open the stove top lid fully. Push in, hold down and turn the burner knob to your desired heat level.

The gas burners (image 3) in the vehicle operate on LPG. The basic operation is the same as a gas stove in a house.

However, the amount of oxygen in a motorhome is limited due to its size; therefore **always have sufficient ventilation when using the stove.**

4. **Whilst the burner knob is still being pushed in, press the igniter switch until the gas lights.** Keep holding down the burner knob.

5. Wait approximately 15 seconds before slowly releasing the burner knob. **If the flame extinguishes the burner knob may have been released too soon.** Start from step two and try again.



IMAGE 1



IMAGE 2



IMAGE 3


WARNING: IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.

MICROWAVE

OPERATING THE MICROWAVE

The microwave in your motorhome will only operate via 240-Volt power. This means that you must have the electric cord plugged into a powered site at a caravan park.

Please be aware that certain materials must not be put in the microwave.

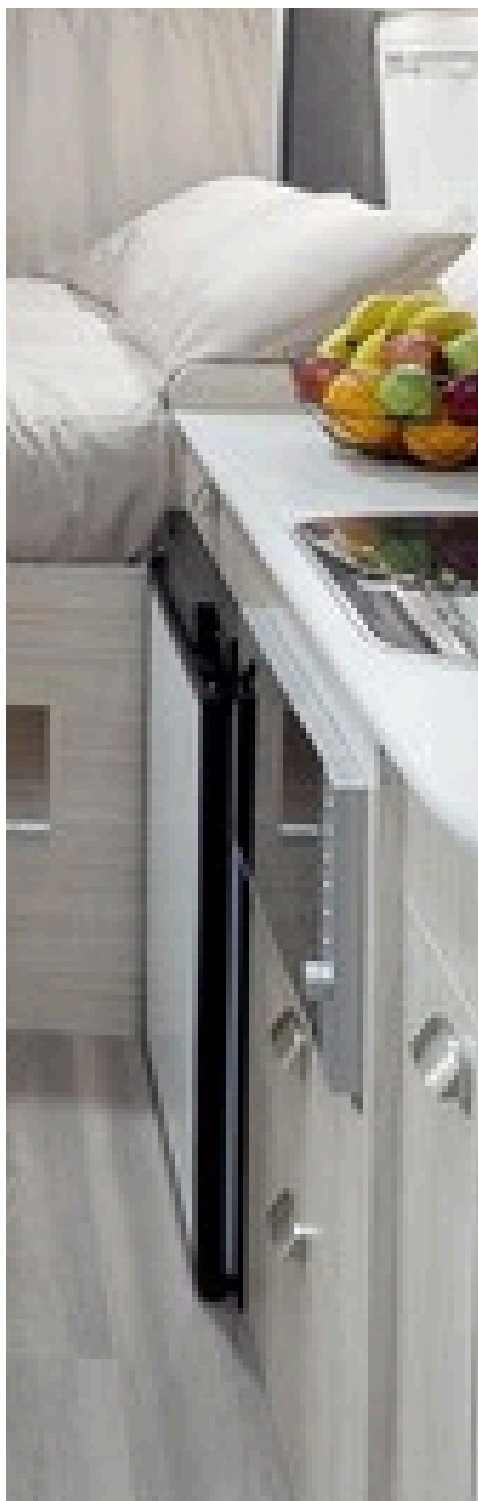

NOT SAFE FOR MICROWAVE USE

- Paper bags – except things like popcorn bags which are designed to be microwaved – are a fire hazard.
- Aluminium foil.
- Never use dishes with metal rims.
- Plastic containers – can melt.
- Wire ties from bread and metal utensils.
- Styrofoam plates and cups – can melt.
- Glass jars – can shatter.

SAFE FOR MICROWAVE USE

- Microwavable glass, ceramic plates and bowls.
- Microwavable browning dishes.
- Microwavable plastic wrap, wax paper, paper towels and napkins.
- Paper plates and cups.

TROUBLESHOOTING THE MICROWAVE

Problem: Microwave is not working and there is no display.

- **Suggestion:** 240-Volt power is not plugged into an outlet. Check that the vehicle is connected to mains power and that the powered outlet is working.

Problem: Microwave is on (light on, turntable working) but is not heating food.

- **Suggestion:** Microwave may be broken. Please call Cruisin' Roadside for assistance.

Problem: Sparks or arcing when microwave is turned on.

- **Possible Cause:** Metal object in microwave.

FRIDGE

HOW TO POWER ON THE FRIDGE

1. **To turn the 12V power ON**, use the fridge in your motorhome, turn the white-coloured 12V Main Switch and the Fridge switch on the 12V switch panel to the 'ON' position (image 1).



IMAGE 1

2. Next turn 'ON' the fridge power source from the fridge control knob located in the freezer compartment (image 2).

The fridge turns off at '0' (zero) and turns on at '1' (one).



IMAGE 2

ADJUSTING FRIDGE TEMPERATURE

Turn the fridge control knob to change the air temperature inside the refrigerator (image 3)

- Turn control to a higher number for colder temperatures.
- Turn control to a lower number for less cold temperatures.

NOTE: To conserve battery power, it is recommended to set the fridge to temperature setting 03,

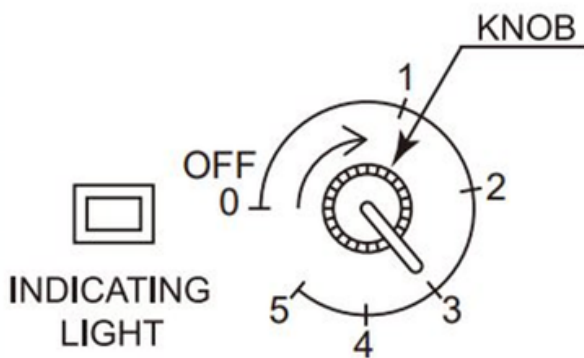


IMAGE 3

TROUBLESHOOTING

The fridge will stop functioning if the voltmeter (image 4) in your motorhome reads below 12.0 volts. To resume operation in such a case, connect the vehicle to a 240V mains power supply to recharge the auxiliary battery.



IMAGE 4

**THE FRIDGE DRAWS A LOT OF POWER FROM THE AUXILIARY BATTERY,
SO WE ADVISE THAT YOU PLUG THE VEHICLE INTO A 240V MAINS-
POWERED SITE EVERY SECOND NIGHT TO CHARGE THE 12-VOLT
AUXILIARY BATTERY**

PRIVACY CURTAINS

HANGING THE CURTAINS

The **privacy curtain is stored above the driver's seat in this compartment** (image 5).



IMAGE 5

Remove the privacy curtain from the storage compartment. **Use the press buttons** (images 6, 7, 8) to **attach the studs** in the driver's cabin (image 9).



IMAGE 6



IMAGE 7

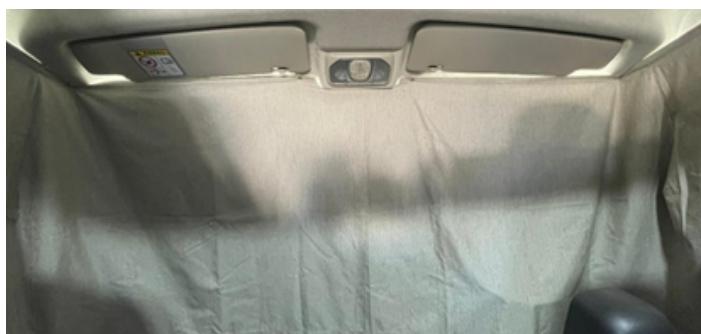


IMAGE 8



IMAGE 9

Attach all the buttons in the **correct order** to make sure the front windscreen and the cabin door windows are properly covered.



TELEVISION - MAJESTIC

PROGRAMMING THE TV

Each motorhome is equipped with a television for your entertainment. **The remote (image 2) for the television is located on the passenger seat in the main driver's cabin.**

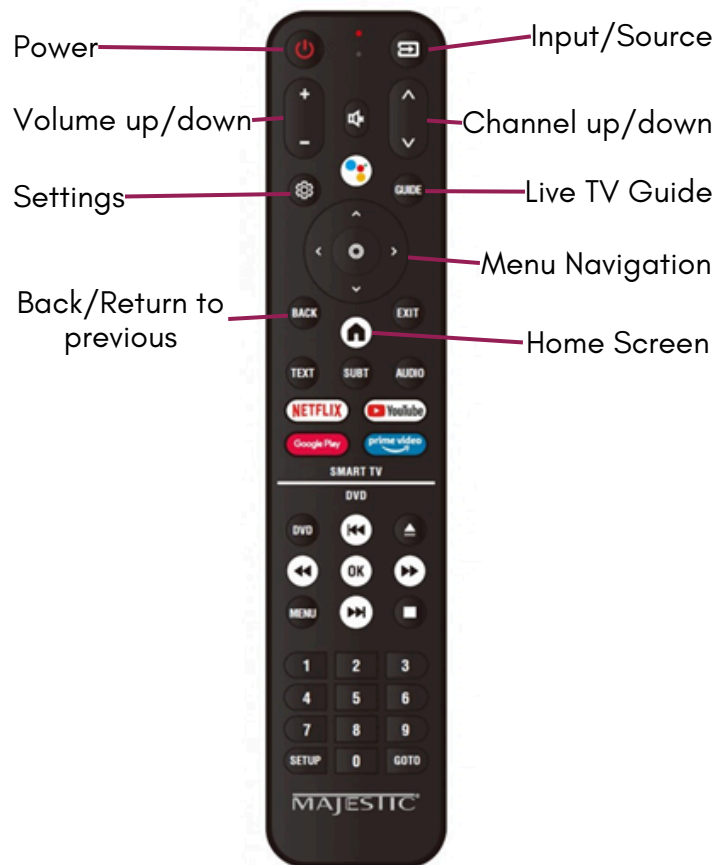


IMAGE 2

How to program the Television:

1. Press the 'Power' button on the remote to turn the television on.

2. Press the 'Home' button then navigate to 'Live TV' (image 1).

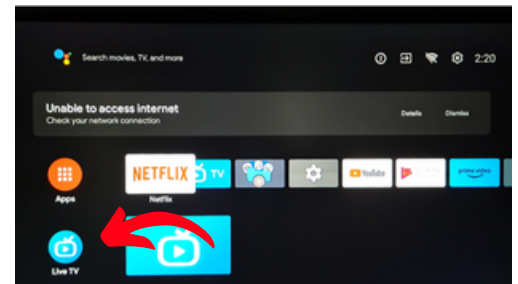


IMAGE 1

3. Press the 'Settings' button on the remote.

4. Scroll down to 'Channel', press 'OK', then press 'OK' again on 'Channel Scan' (image 2).

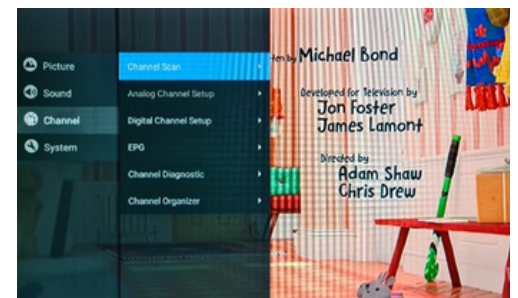


IMAGE 2

5. Scroll down to 'Antenna Auto Scan' and press 'OK' (image 3).

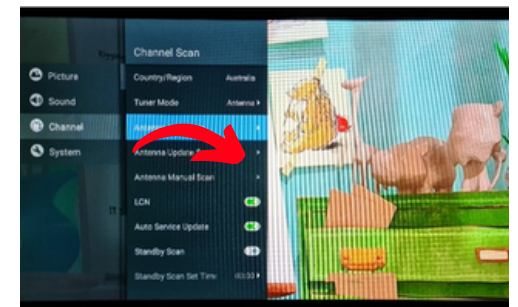


IMAGE 3

6. Allow the television to tune (image 4). Cruisin' cannot guarantee reception. Please also be aware that television signal may be weak in rural or mountainous areas.

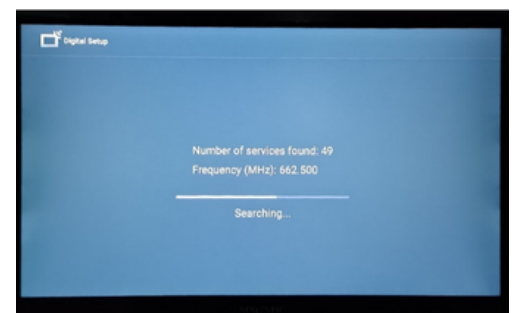


IMAGE 4

There is a DVD player built into the television for your convenience.

7, When tuning is complete. You can see current broadcasts by pressing the 'Guide' button (image 5)



IMAGE 5

HEATER & AIR CONDITIONER

WEBASTO SYSTEM

TURN THE AIR-CONDITIONING OFF WITH THE REMOTE BEFORE UNPLUGGING THE VEHICLE FROM 240-VOLT MAINS POWER.

1. Plug the vehicle into 240 Volt Mains Power.
2. Turn on the unit by pressing the power button on the remote control.
3. Select the mode and set the temperature using either the ↑ button (higher) or ↓ button (lower) (image 1).



IMAGE 1

TRUMA SYSTEM

1. Plug the vehicle into 240 Volt Mains Power.
2. Turn on the unit by pressing the power button on the remote control.
3. Select the mode and set the temperature using either the - button (higher) or + button (lower) (image 2).



IMAGE 2

USING THE AIR CONDITIONER IN HOT & HUMID CONDITIONS

In hot temperatures, the A/C May fluctuate in power due to issues with the 240-volt power source. This can cause internal fuses to blow which will result in the a/c not working.

When using the air conditioner in humid conditions, close all windows and doors when in use. Turn the temperature to 23 degrees ensuring the fan is turned to medium. Do not run it below this temperature.

By following these instructions, **you will minimise the chances of condensation that can cause the unit to overflow with water inside the motorhome.**

USING THE AIR CONDITIONER IN COLD CONDITIONS

The air conditioning units **may stop working once the temperatures reach below 4+ degrees.** If this occurs, wait for the temperature to rise and try again.

CHANGING AIRCON UNIT'S OPERATION MODES (WEBASTO)

Press MODE button on the remote to change the operating modes.

Symbol	Mode	Description
	COOL Mode	- In COOL mode the air distributor shows the  symbol and the vehicle will be cooled.
	DRY Mode	- In DRY mode the unit is reducing the humidity inside the vehicle.
	FAN Mode	- In FAN mode the indoor air is circulated through the vehicle without heating or cooling.
	HEAT Mode	- In HEAT mode the air distributor shows the  symbol and the vehicle will be heated.
	AUTO Mode	AUTO mode - In AUTO mode the unit automatically selects heating or cooling mode depending on the difference between current room temperature and set point temperature.

CHANGING AIRCON UNIT'S OPERATION MODES (TRUMA)

Press MODE button on the remote to change the operating modes.

Cooling	
Heating	
Automatic mode	auto
Circulated air	

FRESH WATER TANK & WATER ACCESS

FILLING THE TANK

This motorhome has a freshwater system, **including a water pump and freshwater tank**. The water tank has an **80-litre capacity** and is located outside the motorhome on the driver's side of the vehicle.

1. **Unlock** the 'water' compartment **with the small gold key on your key ring** (image 1 & 2).



IMAGE 1

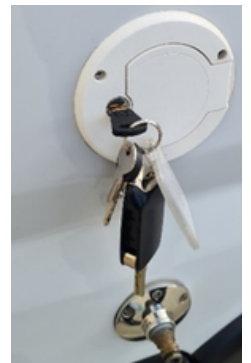


IMAGE 2

2. Remove the **white cap** from the water inlet (image 3).



IMAGE 3

3. **Remove keys from the lock before filling the tank**. Place the **bare end** of the water hose into the tank and **connect the hose to the tap** to fill it with fresh water (image 4).



IMAGE 4

Do not use too much pressure when filling the tank as the tank must be vented when filling. In the event of an airlock, simply remove the hose, reinsert it and fill slowly again.

When your tank is full the water will start to overflow from the water inlet. **Cruisin' recommends that you fill up your freshwater tank as often as possible.**



THE WATER PUMP

Once you have water in your tank, find the 12-volt switch panel in the cabinet (image 5), flick the 'water pump' button down. The pump operates as part of the 12-volt system. **When you are not using the water pump, ensure you turn it off.** You must have this button ON to operate the kitchen tap, shower and the flush for the toilet.



IMAGE 5

**DO NOT USE THE PUMP WHEN THE WATER TANK IS EMPTY.
CONTINUOUS USE WITH A DRY TANK WILL DAMAGE THE PUMP &
CAUSE AN AIR LOCK.**

MAINS WATER ACCESS

The motorhome also has a mains water access point where you can **use water supply directly from the outside tap.**

1. **To start using mains water,** locate the hose in the rear storage compartment and remove the adaptor fitting (image 6).



IMAGE 6

2. Locate the **mains water inlet on the driver's side and connect the hose** (image 7).



IMAGE 7

- Mains water supply **will NOT fill your water tank.**
- When using the mains water supply, don't have the pump turned on. **If you have the pump on the water will come from the fresh water tank** and NOT from the mains water supply.
- Please **make sure your water pump has been turned 'off'** from the 12-Volt switchboard when using Mains water.
- **Do NOT turn on the caravan park's mains water tap at maximum pressure.** Always use the mains water on medium or low pressure. **Excessively high pressure may cause damage to the mains water fittings and cause a water leak.**

GREY WATER

EMPTYING YOUR GREY WATER TANK

1. Collect the grey water hose from the storage shelf.
2. **Firmly attach the hose to the outlet by pulling down the silver levers** on each side of the hose (image 1 & 2).



IMAGE 1



IMAGE 2

3. Place the other end of the hose into the dump station disposal opening and **open the tank by turning the red lever** so it is parallel with the pipe (image 3). **Wait for it to empty.**



IMAGE 3

4. Close the lever (image 4).
5. Remove the hose and stow in the storage compartment.



IMAGE 4

TROUBLE SHOOTING YOUR GREY WATER

In the event that the grey water tank is blocked, try to insert a hose into the grey water outlet as far as it reaches. Turn the hose onto maximum pressure and run the water into the tank until it is full. Remove the hose and the grey water should flow. Repeat if necessary until blockage has been removed.

YOU MUST EMPTY YOUR GREY WATER TANK BEFORE YOU RETURN THE VEHICLE.

THE HOT WATER HEATER

HOW TO USE

1. Turn on the pump or mains water. If the vehicle is plugged into 240v power, the hot water will start to heat automatically. It will take approximately 30 minutes to heat.

1. To use the water heater on LPG, turn on the gas bottle located on the driver's exterior side and **ensure that the valve is fully open (image 5).**

You must turn the valve on the gas bottle anticlockwise to open and clockwise to close. **The system will not operate if there is not enough gas in the bottle or the valve is not fully open.**

2. Turn on the hot water switch and water pump switch on the **12-volt control panel (image 6).**

3. Push the 'Boiler' switch up to **60 degrees (image 7).**

4. **A red light will flash briefly on the 'Boiler' switch.** It should then go out indicating that the system is working. **If the solid red light comes back on, it indicates that the burner has not ignited** and if this does happen, turn everything off, reset the switch to neutral and try again.

You can repeat this a maximum of 3 times. If ignition is not achieved by the 3rd attempt, leave the system for 10-15 minutes before trying again.



IMAGE 5



IMAGE 6



IMAGE 7

THIS WILL HEAT YOUR WATER IN THE SHOWER AND SINK. IT WILL TAKE APPROXIMATELY 30 MINUTES BEFORE THE WATER IS HEATED & READY FOR USE.

SHOWER & TOILET USE

HOW TO USE SHOWER

The shower head is mounted over the toilet (images 3 & 4). **Refer to the water heater section to heat the water before use.**



IMAGE 3

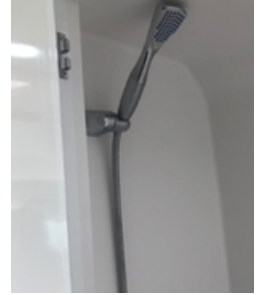


IMAGE 4

HOW TO USE TOILET

1. Turn on the water pump at the 12-volt switch (image 3)
2. **Push the lever open** (image 4), then **open the lid**.
3. **Press the blue button** (flush) for 1 second to wet the bowl (image 5).
4. After using the toilet, **hold the blue button** (flush) to rinse the toilet bowl (image 5).
5. **Close the lid, then close the lever** (image 4).



IMAGE 3



IMAGE 4



IMAGE 5

ENSURE THE TOILET LID IS CLOSED WHILST YOU'RE DRIVING.

THE TOILET CASSETTE

HOW TO USE

It is **recommended that the toilet cassette (image 1) is emptied regularly**. To empty the cassette, lift the blue lever and pull the entire cassette out of the vehicle (image 2).



IMAGE 1



IMAGE 2

If the cassette is jammed or stuck, do not force it. Simply check that the toilet cavity inside the vehicle is in the closed position.

Once the cassette is out of the vehicle, turn the pour-out spout and unscrew the cap (image 3). **You must dispose of the waste in a black water dump point.**



IMAGE 3

Once you have emptied the toilet cassette, rinse out the cassette and empty again, then **add a toilet chemical** along with about **a cup of water**. On your *last day of rental*, you don't need to add the chemicals and water; the cassette needs to be **completely empty**.

It is important that the cassette clicks back in to position as it must align with the toilet above.

NEVER HOSE OUT THE TOILET CASSETTE COMPARTMENT WHEN TRYING TO CLEAN OUT ANY DIRT OR LEAVES. ONLY USE A DAMP CLOTH TO CLEAN THE INSIDE OF THE COMPARTMENT.

CHANGING A SPARE WHEEL

HOW TO CHANGE

1. Open **flap A** as illustrated in image 2.
2. Turn **knob B anticlockwise** (image 3) and remove it to allow the toolbox to come out.



IMAGE 2

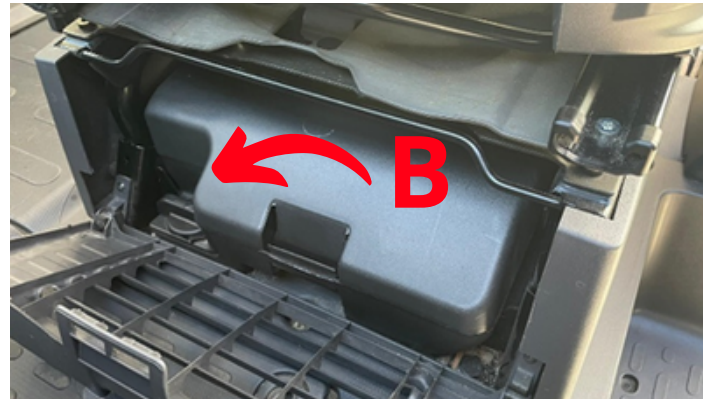


IMAGE 3



IMAGE 4

To remove the spare wheel you will need to insert the Wheel Lowering Tool (E) into the wheel lowering point (image 4).

1. **Safely stop the vehicle** away from traffic. The ground must be flat.
2. Pull the hand brake on, put the vehicle in park gear, and then **switch off the vehicle. Turn on the hazard lights.** Make sure there are **no passengers in the vehicle** and that they stay a safe distance away while changing the wheel.

PLEASE CALL CRUISIN' ROADSIDE ASSISTANCE SO WE ARE AWARE THAT THE TYRE HAS BEEN REPLACED.

IF YOU NEED ANY HELP CHANGING THE TYRE, PLEASE LET US KNOW.

3. From the **Tool Box** (image 1), take out the Wheel Nut Spanner (C), Rod for Spanner (B), Jack (D), and Wheel Lowering Tool (E).

4. To lower the spare wheel, look behind the rear right-side wheel arch. To operate the spare wheel retaining device, assemble tools B & C. Insert Wheel Lowering Tool (E) into the access point cog (image 2) and turn anti-clockwise until the spare wheel is fully lowered on the ground.

5. Remove the spare wheel from under the vehicle. **If the spare wheel does not wind down check for obstructions and road grime.** If the wheel still won't lower, place the Jack (D) under the spare wheel spring and raise it up until the spring compresses. Then lower the Jack.

6. Position the Jack (D) at the jack lifting support points (image 3) **near the wheel that needs replacing.** Use the Jack (D), Rod for Spanner (B) and Wheel Nut Spanner (C) to lift vehicle.

7. Once the wheel has been replaced, **correctly refit the faulty wheel to the spare wheel carrier.** Turn the cog (image 2) clockwise until the faulty wheel rests fully against the sub-platform. Make sure that the locking mark has appeared (image 2-D). Don't keep turning cog past the locking mark.

8. Repack all tools back to their original locations and **contact us so we know to replace the wheel upon your return.**

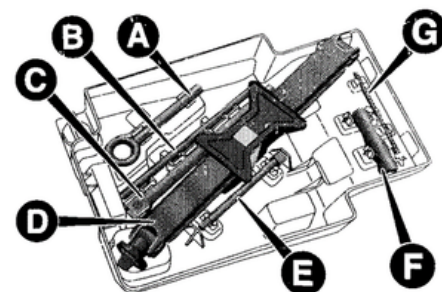


IMAGE 1

The Toolbox includes:

- A - Tow Hook
- B - Rod for Spanner
- C - Wheel Nut Spanner
- D - Jack
- E - Wheel Lowering Tool
- F - Screw Driver Grip
- G - Screw Driver Bit

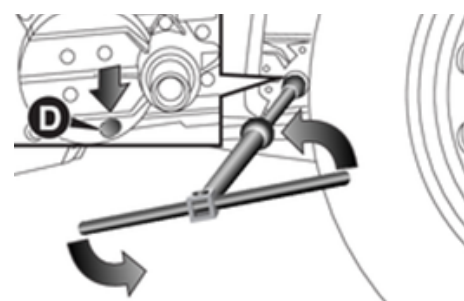


IMAGE 2

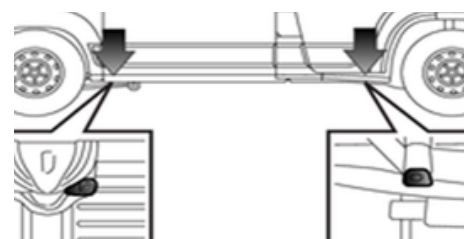


IMAGE 3

**CONTACT CRUISIN' ROADSIDE IF YOU NEED ANY EXTRA ASSISTANCE
WITH CHANGING THE WHEEL.**



1300 016 532
(in Australia)



+61 361 691 702
(international)



INFORMATION & CONDITIONS

Need Help?

Contact Our Friendly
Reservation Team.

1300 664 485 (in Australia)

+61 3 6248 4789 (international)

reservations@cruisinmotorhomes.com.au

DISCLAIMER: This is a summary of rental conditions and does not cover all key points and terms of your rental. Please see the full Terms & Conditions or call our reservations team.

FULL VERSION OF TERMS & CONDITIONS HERE

or visit cruisinmotorhomes.com.au



SCAN ME!



Thank you for choosing Cruisin' Motorhomes! Your safety and security are our greatest concern, so to assist you in making your holiday a great experience, it is important for you to carefully read the Summary of Rental Conditions. **This page contains a summary of our Rental Terms and Conditions and should not be regarded as the entire Rental Agreement.**

FINES FOR SPEEDING, TOLLS, & OTHER INFRINGEMENTS

Cruisin' reserves the right to submit a statutory declaration to the issuing authority and/or charge the customer for any speeding, toll way, parking or other offences. Also, Cruisin' reserves the right to charge an **additional administration fee of up to \$55 per offence.**

TRAVEL INSURANCE

We strongly recommend that renters take out the highest level of Travel Insurance. **Cruisin' does not accept liability for personal injuries.**

VOLUNTARY DOWNGRADES

Should you decide to downgrade the vehicle within 14 days of pick up or during the rental, **you will not be entitled to a refund.**

LATE RETURN

You must request an extension. Failure to do so will result in a late fee of AU\$150 per day plus the daily rental rate and the daily rate of your Liability Reduction every day until the vehicle is returned. The rental rate charged will be based on the current rates of the day, so they may differ from your original booking. **These charges will be applied to your credit card on a daily basis until the vehicle is returned.**

RENTAL EXTENSION

If you wish to extend the rental, you may call our reservations team. Any extensions will be charged at the current rental rate at that time. This request is subject to availability.

ROAD RESTRICTIONS

All Cruisin' vehicles **can only be driven on sealed/bitumen roads.** The **only exceptions are well-maintained roads of less than twelve (12) kilometres to recognised campgrounds.** Cruisin' reserves the right to restrict vehicle movements due to adverse road or weather conditions, and if the distance is greater than the length of your rental period.

OUT OF HOURS RETURN MAX COVER ONLY

Customers wishing to return their Vehicle on a Sunday when the branch is closed can **request an Out of Hours Return between 8am - 3.30pm (standard rates apply).**

REPAIRS & DAMAGE

You are permitted to conduct any repair up to \$100 (including GST) - all that is needed for full reimbursement is the receipt for the amount of the repairs. For repairs over \$100, call Cruisin' Roadside. **Damages to the vehicle itself may be subject to liability depending on your cover type.**